




**Model  
G3PB**  
**SOLID STATE CONTACTOR**

## INSPECTION MANUAL

Thank you for purchasing an OMRON product. Confirm product which must be required and read this manual throughly for correct use before actually using it.  
This manual should be ready to use any time whenever required.

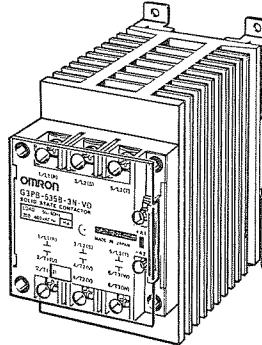

### OMRON Corporation



A potentially hazardous situation by misuse, could result in death or serious injury, or minor or moderate injury.



A potentially hazardous situation by misuse, may result in property damage only accident.

### Warning

When ready for wiring, the power source should be disconnected first. Further, at operating this unit, the terminal cover should be closed correctly in order to prevent an electrical shock.



### Caution

Right after cutting power source or at operating, never touch SSR especially the heatsink which must be in high temperature at the surface, in order to prevent a burnt in the hand.



Do not touch the output terminal immediately after you turn off the power switch. Otherwise, electric shock may be caused because electricity is charged in the built-in snubber circuit.



Turn the main power off when wiring or you may be struck by electricity. After wiring, put terminal cover onto G3PC to prevent from striking by electricity if you touched it by accident when operating.



Do not apply short-circuit current to load side of SSR. If so, SSR may explode.




### Notice

- The manufacturer has been making efforts to improve the product quality and reliability. But the semi-conductors used in the SSR may malfunction or get damaged.
- When Setting up your system with the SSR, keep in full mind safety factors, such as redundant configuration, fire hazard measures and foolproof design, in order to avoid personal injury, fire and property damage.
- Don't supply a high voltage/current to the input and output. Short circuit failure or burning must be occurred on SSR.

- Never stay a screw terminal loosen at operating of this unit. It causes abnormal heating on the terminal and burning on SSR.
- Must need an air convection for SSR or the heatsink. Less convection air produces a heating on SSR abnormal and causes a short-circuit failure and burning.
- Pay attention not to allow this contactor to drop on you. It is heavy and may get you injured.

### Mounting and Mounting for DIN Rail

- Since this contactor weighs heavy, install the rails firmly. Mount the DIN rails of SSR also firmly. Loose mounting may cause dropping. Fix both the ends by end plates.
- Slide the fixture part with a flat-blade screwdriver (6.0×0.8mm) to the direction that the arrow indicates as below. (the same applies when removing.)

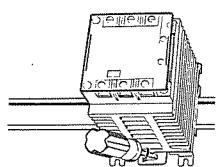

### Applicable DIN rails


- Mountable to TH35-15Fe (IEC60715)
- Makers and types of applicable rails are as follows:

Thickness	1.5mm	2.3mm
Maker	AM1-DE200	
WAGO	210-114,210-197	210-118
PHOENIX	NS35/15	NS35/15-2.3

### Drill for mounting holes as the following dimension.


Type1 4-Φ4.5 or M4

64±0.3

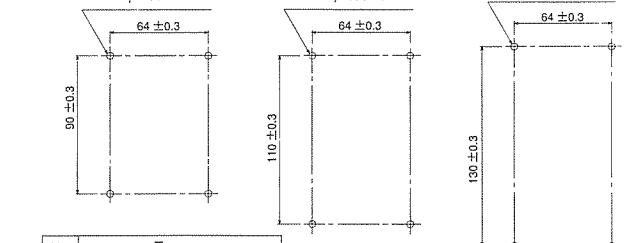


Type2 4-Φ4.5 or M4

64±0.3

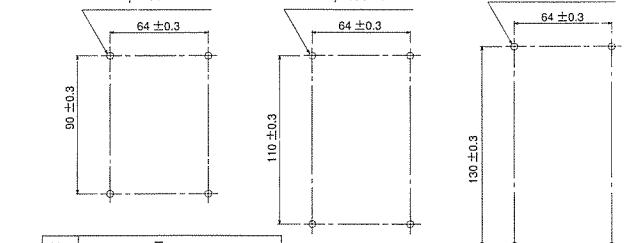

Type3,4 4-Φ4.5 or M4

64±0.3

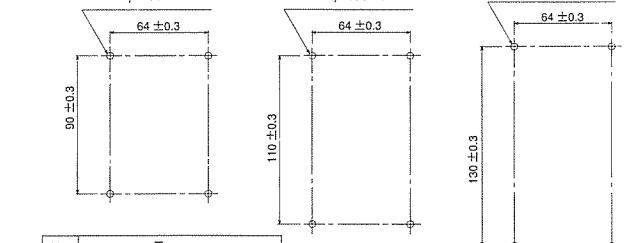


No.	T y p e
1	G3PB-215B-3N-VD, G3PB-515B-3N-VD, G3PB-215B-2N-VD, G3PB-515B-2N-VD, G3PB-255B-2N-VD, G3PB-525B-2N-VD,
2	G3PB-225B-3N-VD, G3PB-525B-3N-VD, G3PB-235B-2N-VD, G3PB-535B-2N-VD,
3	G3PB-235B-3N-VD, G3PB-535B-3N-VD, G3PB-245B-2N-VD, G3PB-545B-2N-VD,
4	G3PB-245B-3N-VD, G3PB-545B-3N-VD,

Without heat sink (SSR proper)  
68±0.3  
4-Φ4.5 or M4


The SSR with heat sink is heavy. Therefore, when mounting it directly, first temporarily fit the two lower screws and tighten the two upper screws so that the bracket of SSR should hang thereon, and then tighten up all these four screws.

### Vertical direction

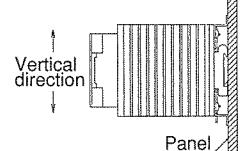


Note: Mount it in such direction that the marking is correctly legible.

### Horizontal direction

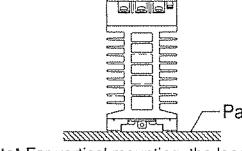


Note: For vertical mounting, the load current must be 50% lower than the rated one (refer to Engineering Data).

### (1) SSR Mounting Pitch Panel Mounting

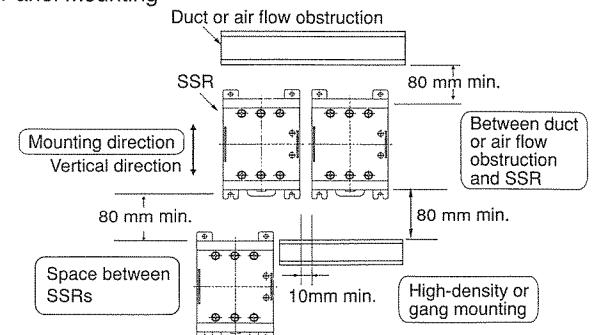


### (2) Relationship between SSRs and Ducts

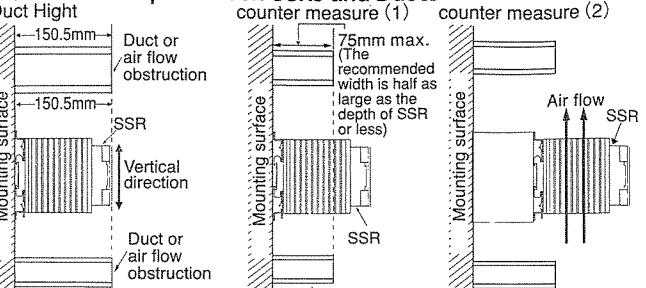

If the height of the ducts cannot be lowered, place the SSRs on a metal base so that they are not surrounded by the ducts.

### (3) Ventilation

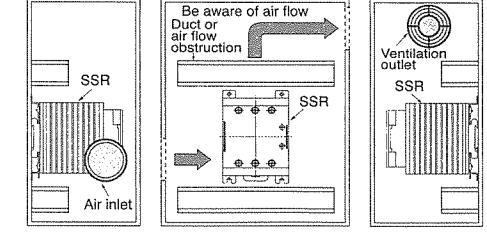

If the air inlet or air outlet has a filter, clean the filter regularly to prevent it from clogging and ensure an efficient flow of air. Do not locate any objects around the air inlet or air outlet, or otherwise the objects may obstruct the proper ventilation of the control panel. A heat exchanger, if used, should be located in front of the SSR Units to ensure the efficiency of the heat exchanger. When attaching a heat sink to the SSR, apply Silicone Grease or equivalent heat conductive grease on the heat sink. (Toshiba Silicone:YG6260, ShinetsuSilicon:G746, etc.) Tighten the mounting screws of the heat sink with a torque of 2.0N·m.

### Please reduce ambient temperature of SSR

The rated load current value of SSR is measured at ambient temperature of 25°C or 40°C. As SSR use a semiconductor in the output element, a temperature of control panel inside ascends as heating by the passage of electric current through load. For this heating restrict, by attaching a fan to a control panel (ventilation outlet or air inlet) and doing a ventilation, an ambient temperature of SSR drop, a reliability improves. (generally, each 10°C reduction in temperature will double the expected life.)

### 3 - element devices

load current (A)	15A	25A	35A	45A
the required number of fan per-unit of SSR	0.70	1.16	1.63	2.09

### 2 - element devices

load current (A)	15A	25A	35A	45A
the required number of fan per-unit of SSR	0.47	0.78	1.09	1.40

EX.: If it is 10 units of SSR for 11A(3 - element devices),

$1.63 \times 10 = 16.3 \rightarrow$  17 units of fan are necessary.

\*size of fan: 92mm<sup>2</sup>, the volume of air: 0.7m<sup>3</sup>/min., an ambient temperature of the control panel: 30°C

\*For heating with a instruments except SSR, of similar control panel inside separately a ventilation is necessary

### Overhaul Prohibition

It should be prevented to overhaul the product in order to repair and modify at where it is used because it is not expected to work correctly and there is a possibility to mark a critical situation.

### Connecting


- Use a wire an adequate size for current to be applied.
- The terminal cover should be for protection after the external wire arrangement was done.
- Confirm if wire for G3PB is not used in pipe or duct for high voltage power supply. Induction will be generated and cause malfunction or damages.
- Terminal screw must be tightened with adequate torque. M3.5:0.75 to 1.18N·m M4:0.98 to 1.37N·m M5:1.57 to 2.35N·m
- To protect from accident by short-circuit, be sure to provide protection devices such as fuse, no-fuse breaker, etc. at the power supply side.
- Select a load within the rated range. Inappropriate load may cause misoperation, trouble or burning.
- Confirm and connect the input terminal correctly for right polarity to prevent any failure cause.

### Drop Prohibition


- SSR uses electronics parts mounting on PCB, so that any dropping and vibration, physical shock beyond the standard level should be prevented, otherwise the initial characteristics will not be insured.

- Avoid using this contactor in the places or under the conditions as mentioned below which may cause trouble, misoperation, or deterioration.
  - Contactor wet with water splash
  - Hot and humid place
  - Place exposed to corrosive gas
- Do not carry out the mounting work with hand stained with oil or metal powder. Otherwise, trouble may be caused.
- Do not use this contactor with its heat radiation fins being bent due to dropping. Bent fins may lower the heat radiation performance, leading to trouble.
- Do not touch the terminal (live) when the contactor is energized. Be sure to attach the terminal cover when using the contactor.
- Select the power supply within the rated frequency range. Inappropriate power frequency may cause misoperation, trouble or burning.


### Dimensions

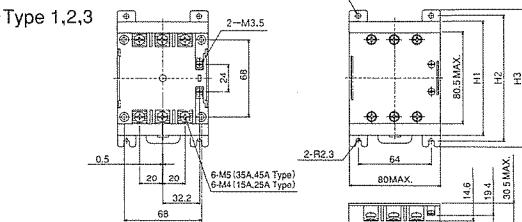

### Type4

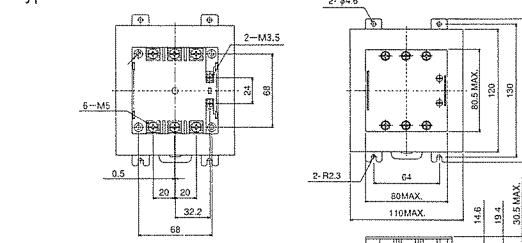

### Without heat sink (SSR proper)

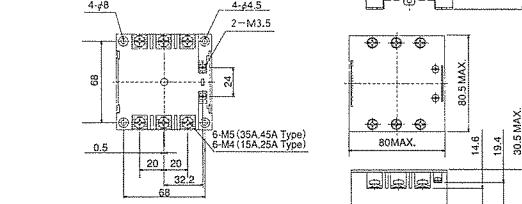

### Safty Standard Approval

- Form designation : IEC947-4-3Form5;DOL
- Rated impulse withstand voltage : 4kV1.2×50μs (AC200V)
- 16kV1.2×50μs (AC480V)

### IPcode:IP40

### Pollution degree:3

### EMC level:EN55011,classB EN61000-6-2

### Conditional Proposal

At the following condition, it should be considered to use the product correctly on the rating and characteristics. Further, any failsafe is required for safety solution and any information is expected to forward to salesmen.

- In case of using at the condition and circumstance not described on the manual or catalogue.
- At Nuclear control, Train, Airplane, Vehicle, Burner control, Hospital equipment Amusement, Safety machine and so on.
- In case of influence to human life and their property.

## OMRON

OMRON EUROPE B.V.  
Wegalaan 67-69, NL-2132 JD Hoofddorp  
THE NETHERLANDS  
PHONE 31-2356-81-300 FAX 31-2356-81-388

OMRON MANAGEMENT CENTRE OF ASIAPACIFIC PTE, LTD.  
510 Thomson Road #13-03  
SLF Building, Singapore 298135  
SINGAPORE  
PHONE 65-353-2611 FAX 65-353-5391

Note: Specifications subject to change without notice.  
Printed in Japan