

GigE Vision

Monochrome / Color CMOS PoE Camera

STC-MBS312POE (3.2M / Monochrome)

STC-MCS312POE (3.2M / Color)

Product Specifications and User's Guide

OMRON SENTECH CO., LTD.

Table of Contents

| | | |
|----------|--|-----------|
| 1 | Product Precautions | 8 |
| 2 | Warranty..... | 8 |
| 3 | Software Licensing | 9 |
| 3.1 | LWIP TCP/IP Licensing | 9 |
| 4 | Overview | 10 |
| 4.1 | Features | 10 |
| 4.2 | Product Number Naming Method | 10 |
| 5 | Specifications..... | 11 |
| 5.1 | Electronic Specifications..... | 11 |
| 5.2 | Spectral Sensitivity Characteristics | 13 |
| 5.2.1 | STC-MBS312POE | 13 |
| 5.2.2 | STC-MCS312POE (without IR Cut Filter) | 13 |
| 5.2.3 | IR Cut Filter (STC-MCS312POE)..... | 14 |
| 5.3 | Mechanical Specifications..... | 14 |
| 5.4 | Environmental Specifications | 15 |
| 6 | Connector Specifications | 16 |
| 6.1 | RJ45 Connector..... | 16 |
| 6.2 | Power and Control Signal Connector | 17 |
| 6.2.1 | Opto-isolated input | 19 |
| 6.2.2 | Opto-isolated output..... | 19 |
| 6.2.3 | Open Collector GPIO | 20 |
| 6.2.4 | Input and Output Signal Timing (Hardware Trigger)..... | 21 |
| 6.2.5 | Input and Output Signal Timing (Software Trigger)..... | 22 |
| 6.2.6 | External Hardware Trigger Input Delay..... | 23 |
| 6.2.6.1 | External Trigger Signal Delay (Positive polarity trigger signal)..... | 23 |
| 6.2.6.2 | External Trigger Signal Delay (Negative polarity trigger signal) | 23 |
| 6.2.6.3 | Measured External Trigger Signal Delay through Opt-Isolated Port (Line 0)..... | 24 |
| 6.2.6.4 | Measured External Trigger Signal Delay through Open Collector GPIO Port (Line 2) | 25 |

| | | |
|-----------|---|-----------|
| 7 | Dimensions..... | 26 |
| 7.1 | STC-MBS312POE | 26 |
| 7.2 | STC-MCS312POE | 27 |
| 8 | Sensor Information | 28 |
| 8.1 | Pixel Transferring Image..... | 28 |
| 9 | Camera Operational Modes | 29 |
| 9.1 | Normal Mode..... | 29 |
| 9.2 | Pulse width trigger mode..... | 30 |
| 9.2.1 | Timing..... | 30 |
| 9.2.2 | Exposure Timing with Positive Polarity Trigger Signal | 31 |
| 9.2.3 | Exposure Timing with Negative Polarity Trigger Signal..... | 32 |
| 9.3 | Edge Preset Trigger Mode | 33 |
| 9.3.1 | Timing..... | 33 |
| 9.3.2 | Exposure Timing with Positive Polarity Trigger Signal | 34 |
| 9.3.3 | Exposure Timing with the Negative Polarity Trigger signal | 34 |
| 9.4 | Edge Preset Trigger Mode (Trigger input while image is out) | 35 |
| 9.4.1 | Timing..... | 35 |
| 10 | Camera Functions | 36 |
| 10.1 | Save and load the camera settings..... | 36 |
| 10.1.1 | Saving Camera Settings..... | 36 |
| 10.1.2 | Loading Camera Settings..... | 37 |
| 10.1.3 | Loading Camera Settings when Camera Power is on | 37 |
| 10.1.4 | Camera Settings Initialization | 37 |
| 10.2 | Frame rate | 38 |
| 10.3 | Gain | 38 |
| 10.3.1 | Analog Gain | 38 |
| 10.3.2 | Digital Gain..... | 38 |
| 10.4 | Exposure Time..... | 39 |
| 10.5 | Black Level..... | 39 |
| 10.6 | ALC (Auto Light Control) | 40 |

| | | |
|---------|--|----|
| 10.6.1 | ALC control method | 41 |
| 10.6.2 | AGC (Auto Gain Control)..... | 42 |
| 10.6.3 | Auto shutter | 43 |
| 10.6.4 | ALC settings procedure | 43 |
| 10.7 | White balance (Only available for color camera)..... | 44 |
| 10.7.1 | White balance control methods | 44 |
| 10.7.2 | White balance control method selection..... | 44 |
| 10.7.3 | White balance calculate region setting | 46 |
| 10.8 | Gamma correction..... | 47 |
| 10.9 | ROI (Region of Interest) | 47 |
| 10.10 | Pixel Format..... | 48 |
| 10.11 | Decimation | 48 |
| 10.12 | Trigger | 49 |
| 10.12.1 | Trigger signal processing procedure | 49 |
| 10.13 | Image Flip..... | 50 |
| 10.14 | LUT Control..... | 50 |
| 10.15 | Defective pixel correction..... | 51 |
| 10.16 | Counter And Timer Control | 52 |
| 10.17 | Event Control..... | 53 |
| 10.18 | Chunk Control | 54 |
| 10.19 | Action Control | 54 |
| 10.20 | IEEE1588 | 55 |
| 11 | GenICam command..... | 57 |
| 11.1 | DeviceControl | 57 |
| 11.2 | ImageFormatControl | 59 |
| 11.3 | AcquisitionControl | 60 |
| 11.4 | AnalogControl | 61 |
| 11.5 | LUTControl..... | 62 |

| | | |
|--------------|-------------------------------------|-----------|
| 11.6 | DigitalIOControl | 62 |
| 11.7 | LogicBlockControl | 63 |
| 11.8 | SoftwareSignalControl | 63 |
| 11.9 | CounterAndTimerControl | 63 |
| 11.10 | EventControl | 64 |
| 11.11 | UserSetControl | 64 |
| 11.12 | ChunkDataControl | 65 |
| 11.13 | ActionControl | 65 |
| 11.14 | FileAccessControl | 66 |
| 11.15 | TestControl | 66 |
| 11.16 | TransportLayerControl | 67 |
| 12 | Revision History | 69 |

Precautions for safe use

Please read carefully this "Precautions for safe use" before use the camera. Then the camera uses correctly with agreeing with below notes.

In this "Precautions for safe use", notes divides into "Warning" and "Caution" to use the camera safety and prevent to harm and damage.

| | |
|----------------|---|
| Warning | This shows, assumption for possibility of serious accident leading death or serious injury if ignore this note and camera uses incorrectly. |
| Caution | This shows, assumption for possibility of bear the damage or physical damage if ignore this note and camera uses incorrectly. |

About Graphic
symbols



This symbol shows general prohibition.



This symbol shows completion or instruction.

[Environment / condition]

| Warning | |
|--|--|
| Do not use flammable or explosiveness atmospheres. This will cause of personal injury or fire. | Do not use for "safety for human body" related usage. This camera is designed for use "do not harm human body immediately" if by any chance the camera has malfunction. |
| Caution | |
| Use and store under specified environmental conditions (Vibration, shock, temperature, humidity) in the specifications for this camera. This will cause of fire or damage the camera. | |

[Installation and cable wiring]

| Warning | |
|---|---|
| Do not use with out of power voltage range that is specified in the specifications for this camera. This will cause of fire, electrification or malfunction. | Do not wrong wiring. This will cause of fire or malfunction. |

| Caution | |
|---|--|
| The camera housing and 0 V line of camera inside circuit are isolated. There is a risk of short circuit between camera inside circuit and frame ground through other devices. This will cause of malfunction. | It is necessary to wiring and mounting that is specified in the specifications for this camera. This will cause of fire or malfunction. |
| It is necessary to wiring with turn off the camera. This will cause of electrification or malfunction. | It is necessary to mounting the camera without stress for the cable. This will case of electrification or fire. |

[Usage instruction]

| Warning | |
|--|---|
| Do not touch the terminal and PCB board While turn on the camera. This will cause of electrification or accident caused by malfunction. | Do not put combustibles near the camera. This will cause of fire. |
| Do not use without usage that is specified in the specifications for this camera. This will cause of personal injury or malfunction. | Do not push metals including screw driver into radiation holes. This will cause of electrification or malfunction. |
| Do not touch the camera housing while or after using the camera. There is a risk of get burned. | |
| Caution | |
| Do not push contamination into opening of the camera. This will cause of electrification or malfunction. | Do not block the radiation holes. This will cause of fire due to increase the camera inside temperature. |

[Maintenance]

| Caution | |
|--|---|
| Do not disassemble or repair the camera. This will cause of fire, electrification or malfunction. | It is turn off the camera when maintaining or inspecting the camera. This will cause of electrification. |

[Disposal]

| Caution | |
|---|--|
| It is necessary to dispose as industrial waste. | |

1 Product Precautions

- Do not give shock to the camera.
 - Do not haul or damage the camera cable.
 - Do not wrap the camera with any material while using the camera. This will cause the internal camera temperature to increase.
 - When the camera moving or using the place that temperature difference is extreme, countermeasure for dew condensation (heat removal / cold removal) is necessary.
 - While the camera is not using, keep the lens cap on the camera to prevent dust or contamination from getting in the sensor or filter and scratching or damaging it.
- Do not keep the camera under the following conditions.
- In wet, moist, high humidity or dusty place
 - Under direct sunlight
 - In extreme high or low temperature place
 - Near an object that releases a strong magnetic or electric field
 - Place with strong vibrations
- Apply the power that satisfies the specified in specifications for the camera.
 - The defective pixels may appear due to the sensor characteristics.
 - Use below recommend materials (or equivalent materials) to clean the surface of glass.
 - Air dust: Non Freon air duster (NAKABAYASHI Co., LTD.)
 - Alcohol: Propan-2-ol (SAN'EI KAKO Co., LTD.)
 - Non-woven: nikowipe clean room (NKB)
 - Use a soft cloth to clean the camera.

2 Warranty

■Warranty period

One year after delivery (However, the camera had malfunction with camera uses correctly)

In below case for a fee even within warranty period.

- The malfunction caused by incorrect usage, incorrect modify or repair.
- The malfunction caused by external shock including the camera dropping after delivery the camera.
- The malfunction caused by fire, earthquake, flood disaster, thunderbolt struck, other natural disaster or wrong voltage.

■Warranty coverage

Exchange or repair the malfunction camera if the malfunction is occurred by our responsibility.

“Warranty” mean is warranty for the delivered camera itself. Please accept the induction damage by the camera malfunction is not included.

3 Software Licensing

3.1 LWIP TCP/IP Licensing

The software in this camera includes LWIP TCP/IP implementation.
The copyright information is

Copyright (c) 2001-2004 Swedish Institute of Computer Science.
All rights reserved.

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. The name of the author may not be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE AUTHOR ``AS IS AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE AUTHOR BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.

4 Overview

This document describes the specification of the following cameras:


STC-MBS312POE / STC-MCS312POE

4.1 Features

- GigE Interface
- Support PoE (Power over Ethernet)
- Small robust camera housing
- Maximum frame rate (Full resolution): 34.98 fps @ 3.2M 8bits
- CMOS (Global Shutter)
- Up to 2,048 Defective Pixel Correction (Default: ON)
- 8bits, 10bits, 12bits output

4.2 Product Number Naming Method

STC-MxS312POE

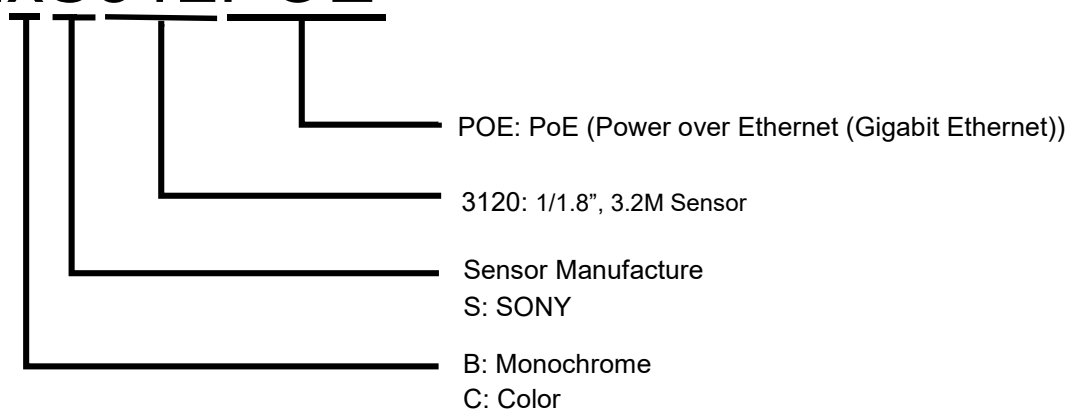

5 Specifications

5.1 Electronic Specifications

| Product | | STC-MBS312POE | STC-MCS312POE |
|-------------------------------|-------------------------------|---|---|
| Image Sensor | | 1/1.8" 3.2M Progressive Monochrome CMOS (SONY: IMX265) | 1/1.8" 3.2M Progressive Color CMOS (SONY: IMX265) |
| Shutter Type | | Global Shutter | |
| Active Picture Elements | | 2,048 (H) x 1,536 (V) | |
| Cell Size | | 3.45 (H) x 3.45 (V) μm | |
| Sync System | | External trigger (Hardware / Software) / Free run | |
| Scanning Mode | | Full scanning (Full resolution) / ROI | |
| Frame rate (at full scanning) | | 8bits: 34.9 fps / 10bits: 17.5 fps / 10bits Packed: 23.3 fps / 12bits: 17.5 fps / 12bits Packed: 23.3 fps / RGB8: 11.6 fps Maximum frame rate: 1,553.86 fps @ 4 lines (8bits) | |
| ADC bit depth | | 12bits | |
| Image Output Format | | Mono8 / Mono10 / Mono10Packed / Mono12 / Mono12Packed | Mono8 / Mono10 / Mono10Packed / Mono12 / Mono12Packed / BayerRG8 / BayerRG10 / BayerRG10Packed / BayerRG12 / BayerRG12Packed / RGB8 |
| Noise | 8bits output | Less than 2.8 digits (Gain 0 dB) | |
| Level | 10bits / 10bits Packed output | Less than 11.2 digits (Gain 0 dB) | |
| | 12bits / 12bits Packed output | Less than 44.8 digits (Gain 0 dB) | |
| Sensitivity (*1) | | 230 Lux | 420 Lux |
| Exposure Time | | 1 $\mu\text{seconds}$ to 16.777 seconds (Default: 28,404 $\mu\text{seconds}$) | |
| Gain | Analog Gain | 0 to 20.8 dB (Default: 0 dB) | |
| | Digital Gain | x1 to x3 (Default: x1) | |
| ROI | | Horizontal: 264 to 2,048 pixels, Vertical: 4 to 1,536 lines (Default: 2,048 x 1,536) Adjustable steps for size: 8 pixels in horizontal direction and 4 lines in vertical direction Adjustable steps for offset: 8 pixels in horizontal direction and 4 lines in vertical direction | |
| Gamma | | Gamma 0.1 to 4.0 (Default: 1.0) | |
| Binning | | N/A | |
| Decimation | | Horizontal and Vertical decimation (2x2) / Off | |
| Image Flip | | Horizontal / Vertical / Horizontal and Vertical / Off | |
| Defective Pixel Correction | | Up to 2,048 points (Default: On) | |
| Auto | Auto Exposure | Support (Default: OFF) | |
| Image | Auto Gain | Support (Default: OFF) | |
| Control | Auto White Balance | N/A | Auto / Manual / Push to Set |
| Operational Mode | | Edge preset trigger / Pulse width trigger / Free run | |
| Interface | | PoE: IEEE802.3af CLASS2 (1000BASE-T) | |
| Protocol | | GigE Vision 2.1 and GenICam SFNC 2.4, IEEE1588 (PTP) | |
| I/O | | One opto-isolated input, one opto-isolated output and one open collector GPIO (Input or output) | |
| Power | Input Voltage (*2) | +10.8 to +26.4 Vdc External power (via 6 pin connector) / Power Over Ethernet (IEEE802.3af) | |
| | Consumption | +12 V / +24 V: 3.4 W, PoE: 4.4 W | |

Default: **Bold**

Precautions


(*1) The sensitivity is measuring the luminance when white level achieved 100 % in below conditions.

| Camera Setting | | Environment | |
|--------------------|-----------------|-------------------|-------------------|
| Parameter | Setting | Parameter | Setting |
| Gain Up | 0 dB | Light Source | Light Box (White) |
| AGC | Off | Color temperature | 5,100K |
| White Balance | Optimum | Lens | |
| Electrical Shutter | 1/30 seconds | F on Lens | F5.6 |
| Black Level | Optimum | Target Luminance | IM-600 (Topcon) |
| Gamma | Factory Setting | | |


(*2) The camera operates with external power when power supplying by external power supply and PoE to camera at same time.

5.2 Spectral Sensitivity Characteristics


5.2.1 STC-MBS312POE

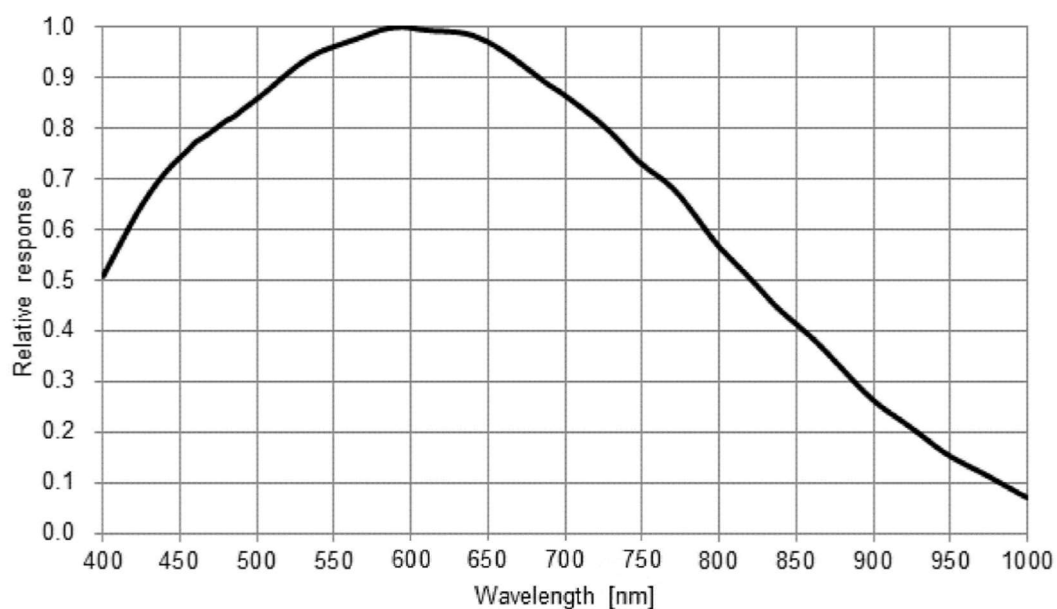

5.2.2 STC-MCS312POE (without IR Cut Filter)

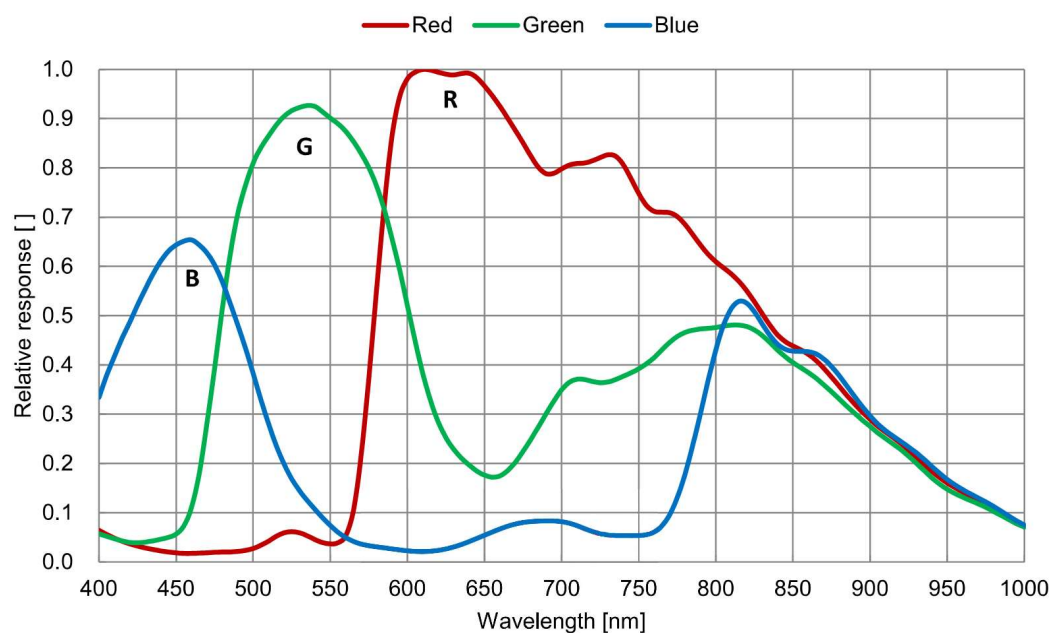

5.2.3 IR Cut Filter (STC-MCS312POE)

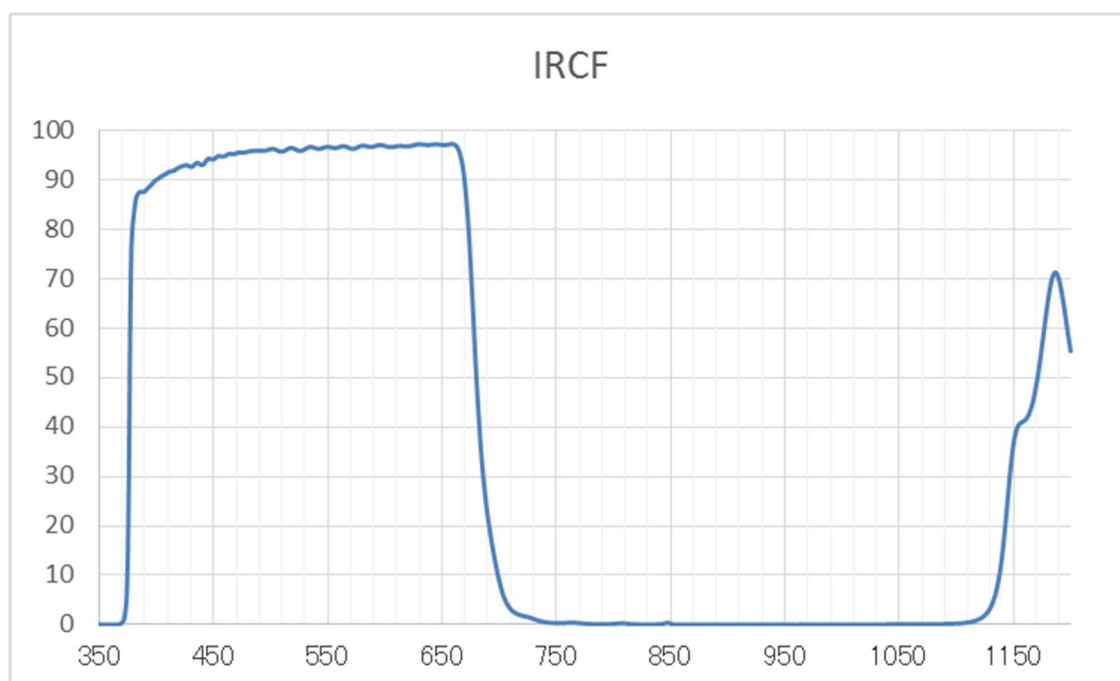

5.3 Mechanical Specifications

| Model Number | STC-MBS312POE | STC-MCS312POE |
|-------------------------|---|---------------|
| Dimensions | 29 (W) x 29 (H) x 53 (D) mm (*1) | |
| Optical Filter | No Optical Filter | IR Cut Filter |
| Optical Center Accuracy | Positional accuracy in Horizontal and Vertical directions: +/- 0.5 mm Rotational accuracy of Horizontal and Vertical: +/- 1.5 deg. | |
| Material | Aluminum Alloy (AC) | |
| Lens Mount | C mount | |
| Interface Connectors | Ethernet connector: RJ45 connector Power- I/O connector: HR10A-7R-6PB (Hirose) or equivalent | |
| Camera Mounting | Six M3 screw holes (Two on top, four on bottom plate) | |
| Weight | Approximately 65 g | |

(*1) Excluding the connectors


5.4 Environmental Specifications

| Model Number | | STC-MBS312POE | STC-MCS312POE |
|------------------------------------|---------|--|---------------|
| Operational Temperature / Humidity | Minimum | Environmental Temperature: 0 deg. C, Environmental Humidity: 0 to 85 %RH (No condensation) | |
| | Maximum | Environmental Temperature: +39 deg. C or Camera housing temperature (top plate) shall not exceed +64 deg. C (*1) Environmental Humidity: 0 to 85 %RH (No condensation) | |
| Storage Temperature / Humidity | | Environmental Temperature: -20 to +70 deg. C, Environmental Humidity: 0 to 85 %RH (No condensation) | |
| Vibration | | 20 Hz to 200 Hz to 20 Hz (5 min. / cycle), acceleration 10 G, XYZ 3 directions, 30 min. each | |
| Shock | | Acceleration 38 G, half amplitude 6 ms, XYZ 3 directions, 3 times each | |
| Standard Compliancy | | EMS: EN61000-6-2, EMI: EN55011 | |
| RoHS | | RoHS Compliance | |


(*1) Please insure the camera is installed with the appropriate heat dissipation. If camera has a mounted lens and a tripod with an aluminum plate, this could decrease the camera housing temperature for heat dissipation. When the internal temperature sensor on the camera shows less than 74 deg. C, the camera housing temperature (top plate) will be less than 64 deg. C.

Taking these steps will maintain the heat rating of the electronic components of the camera.

Upper side of camera

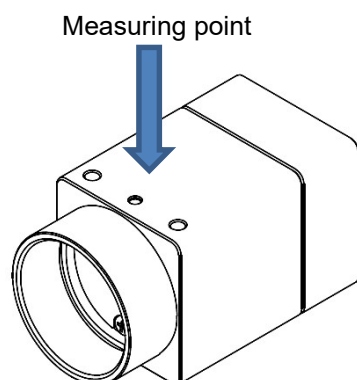

6 Connector Specifications

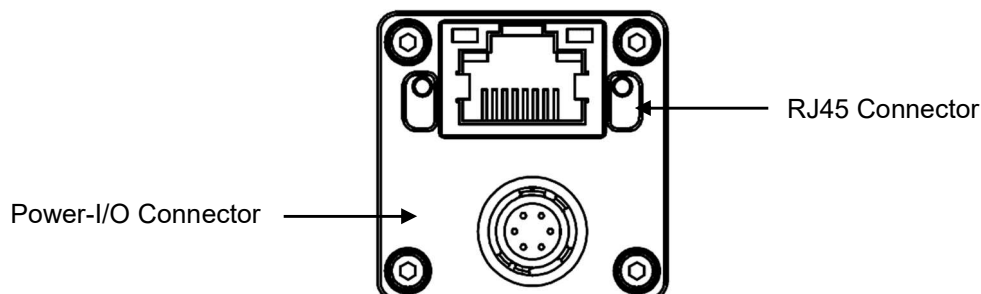

6.1 RJ45 Connector

This product is PoE compliant.

Please supply power (+10.8 to +26.4 Vdc) through the power-I/O connector when using non-PoE-compliant NIC.


Pin Assignment

| Pin No. | Signal Name |
|---------|-------------|
| 1 | TA+ |
| 2 | TA- |
| 3 | TB+ |
| 4 | TC+ |
| 5 | TC- |
| 6 | TB- |
| 7 | TD+ |
| 8 | TD- |


LED

| Green LED | Yellow LED | Status |
|-----------------|-----------------------|----------------------|
| Green Light ON | Yellow Light OFF | Power ON (1GB NIC) |
| Green Light OFF | Yellow Light OFF | Power ON (100MB NIC) |
| Green Light ON | Yellow Light Blinking | 1 GB Transferring |
| Green Light OFF | Yellow Light Blinking | 100 MB Transferring |


Yellow LED Green LED

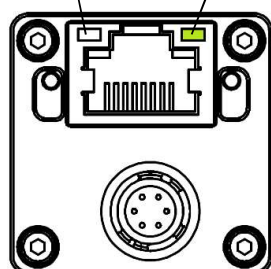

Camera is powered-on

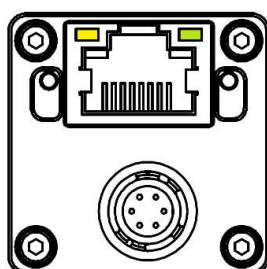

Green light: ON
Yellow light: Blinking
1 GB Transferring

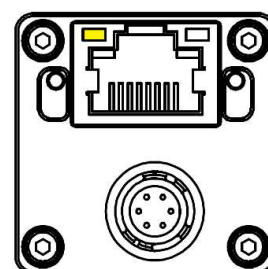

Green light: OFF
Yellow light: Blinking
100 MB Transferring

Please use a 1GB supported NIC, Network Switcher and Ethernet cable.

Check the setting of NIC and Network Switcher being used is "1GB transferring".

6.2 Power and Control Signal Connector

HR10A-7R-6PB (Hirose) or equivalent


This connector is for the power supply and input / output signals.

The power from this connector is priority power for camera when power supplies through this connector and PoE at same time.

Please use HR10A-7P-6S (Hirose) or equivalent for cable.

Pin assignment

| Pin No. | Signal Name | IN / OUT | Voltage |
|---------|-----------------------------|----------|---|
| 1 | POWER IN | IN | +10.8 to +26.4 Vdc |
| 2 | Opto-isolated in (Line0) | IN | Low: Smaller than +1.0 V High: +3.0 to +26.4 V * Potential difference between TRG_in and Opt. Isolated Common |
| 3 | Open Collector GPIO (Line2) | IN / OUT | +3.0 to +26.4 V / Open Collector |
| 4 | Opto-isolated out (Line1) | OUT | Open Collector |
| 5 | Opto-isolated Common | IN | |
| 6 | GND | IN | 0 V |

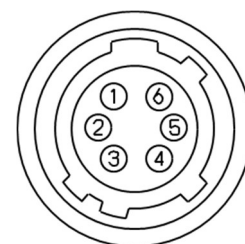

Configuration of Line2 (Pin No.3) and Line1 (Pin No.4)

Output signal can be assign by GenICam command.

| GenICam |
|--|
| 1) Frame Trigger Wait (Default for all output) |
| 2) Frame Trigger Internal |
| 3) Exposure Active |
| 4) Acquisition Trigger Wait |
| 5) Acquisition Trigger Internal |
| 6) Sensor Read Out |
| 7) Debounced Line 0 |
| 8) Debounced Line 2 |
| 9) User Output 1 |
| 10) User Output 2 |
| 11) Timer 0 Active |
| 12) Software Signal 0 |
| 13) Software Signal 1 |
| 14) Logic Block 0 |
| 15) Pulse Per Second |

1) Frame Trigger Wait

The condition of camera operation with trigger signal can be check.

“LOW” state of signal is out between “start exposing” to “image out”.

2) Frame Trigger Internal

The input trigger signal with the trigger delay (camera internal process delay).

3) Exposure Active

While camera exposing, “HIGH” state of signal is out. The signal state will be “LOW” after finish exposing.

4) Acquisition Trigger Wait

While image transferring from camera to PC, “Low” state of signal is out. The signal state will be “High” after finish image transferring.

5) Acquisition Trigger Internal

The image transferring starts signal is out.

6) Sensor Read Out

FVAL (Frame valid, HIGH state) signal is out.

7) Debounced Line0

Debounced Line0 signal is out.

8) Debounced Line2

Debounced Line2 signal is out.

9) User Output 1 (User Output signal through Line 1)

Selected “HIGH” or “LOW” state of signal is out.

10) User Output 2 (User Output signal through Line 2)

Selected “HIGH” or “LOW” state of signal is out.

11) Timer 0 Active

Selected signal at “Timer Counter” is out.

When signal synchronizing with “Exposure Active” signal, signal can use for strobe control.

12) Software Signal 0

Selected signal for “Software Signal 0” at “Software Signal Control” is out.

13) Software Signal 1

Selected signal for “Software Signal 1” at “Software Signal Control” is out.

14) Logic Block 0


“Logic Block 0” signal is out.

15) Pulse Per Second

“Pulse / second” signal (50% Duty, 1 Hz interval) is out.


6.2.1 Opto-isolated input

The camera has current limiting circuit on camera. The current limiting resistor does not necessary.

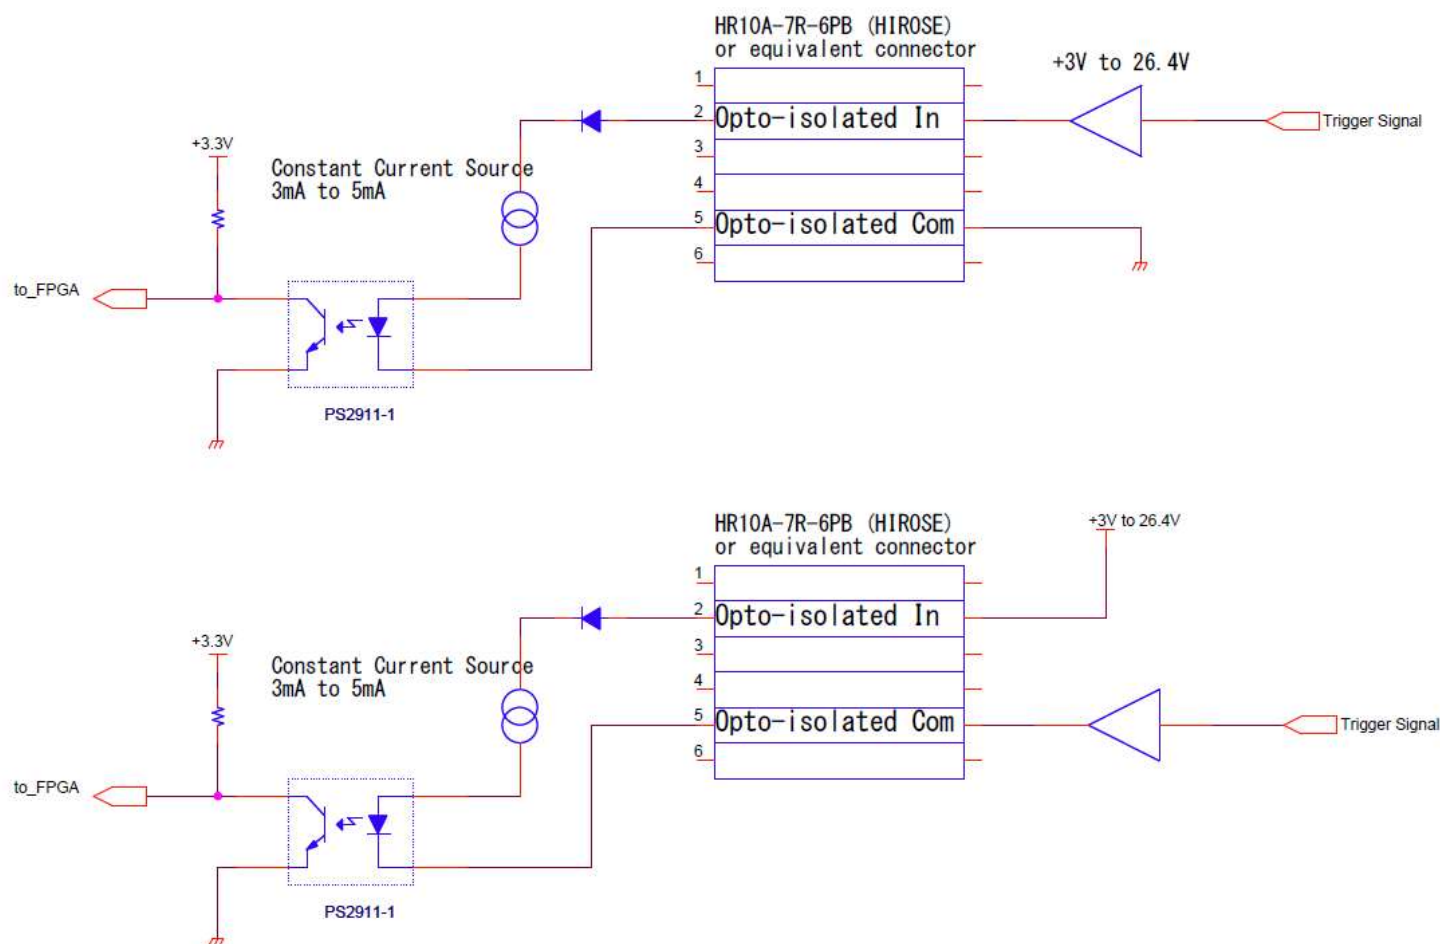

6.2.2 Opto-isolated output

It is necessary to have current limiting resistor at outside of camera, to keep less than 50 mA.

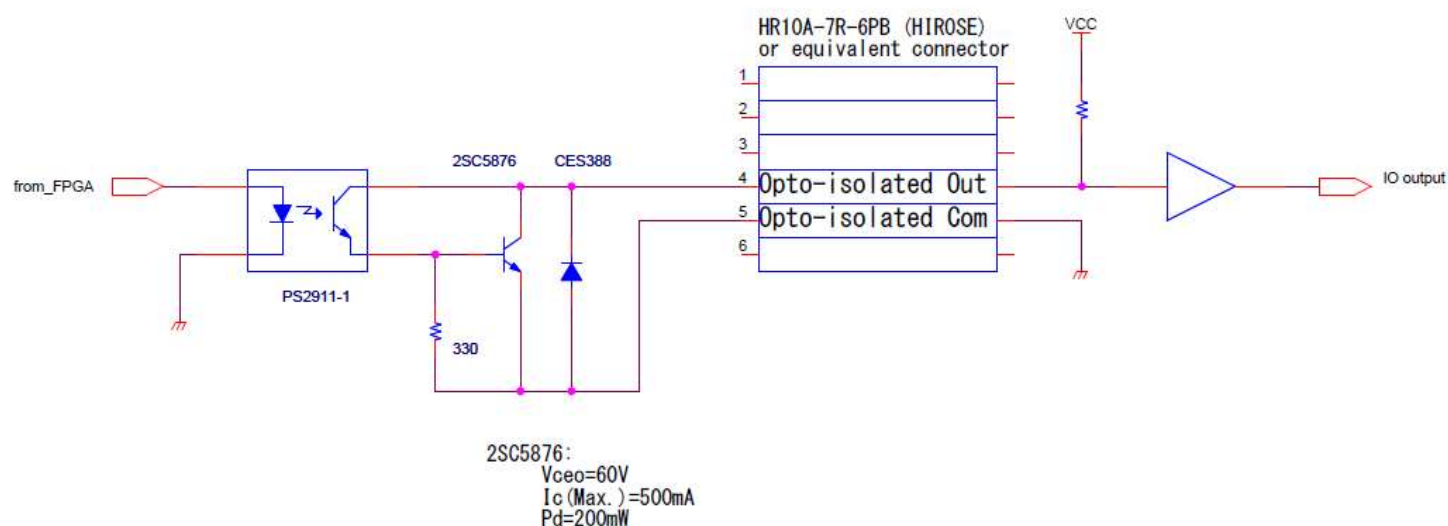


6.2.3 Open Collector GPIO

This GPIO can be used for input or output.


When using as output, it is necessary to have current limiting resistor at outside of camera, to keep current less than 50 mA.

When using as input, current limiting resistor does not necessary. However, camera does not have current limiting circuit on camera. The camera inside circuit may get damage if accidentally uses as output without current limiting resistor. For safety, please add current limiting resistor even use as input.

a) Open Collector GPIO uses as output

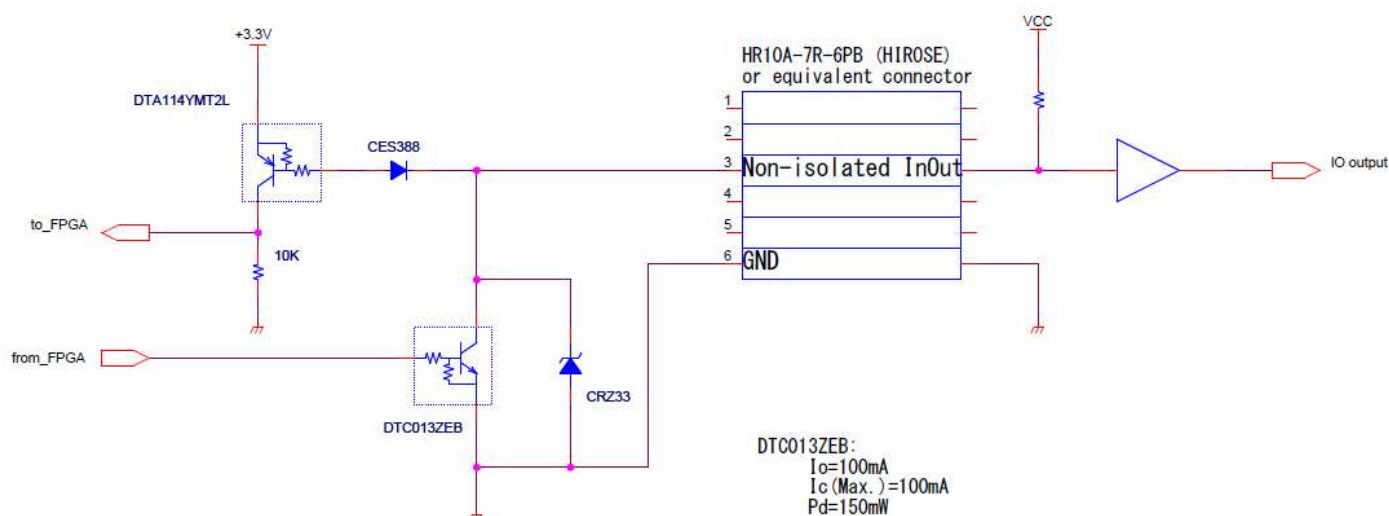


b) Open Collector GPIO uses as input

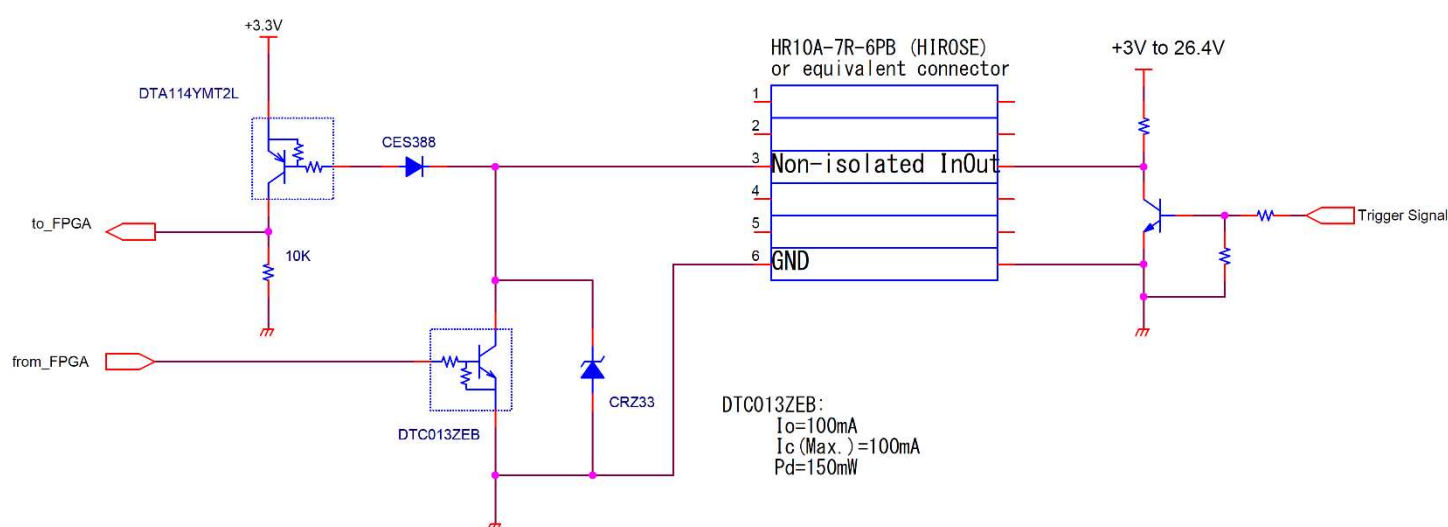

6.2.4 Input and Output Signal Timing (Hardware Trigger)

Case of “External Hardware Trigger”, “Timed Exposure Mode” and “Positive Edge Trigger”

Camera internal processing

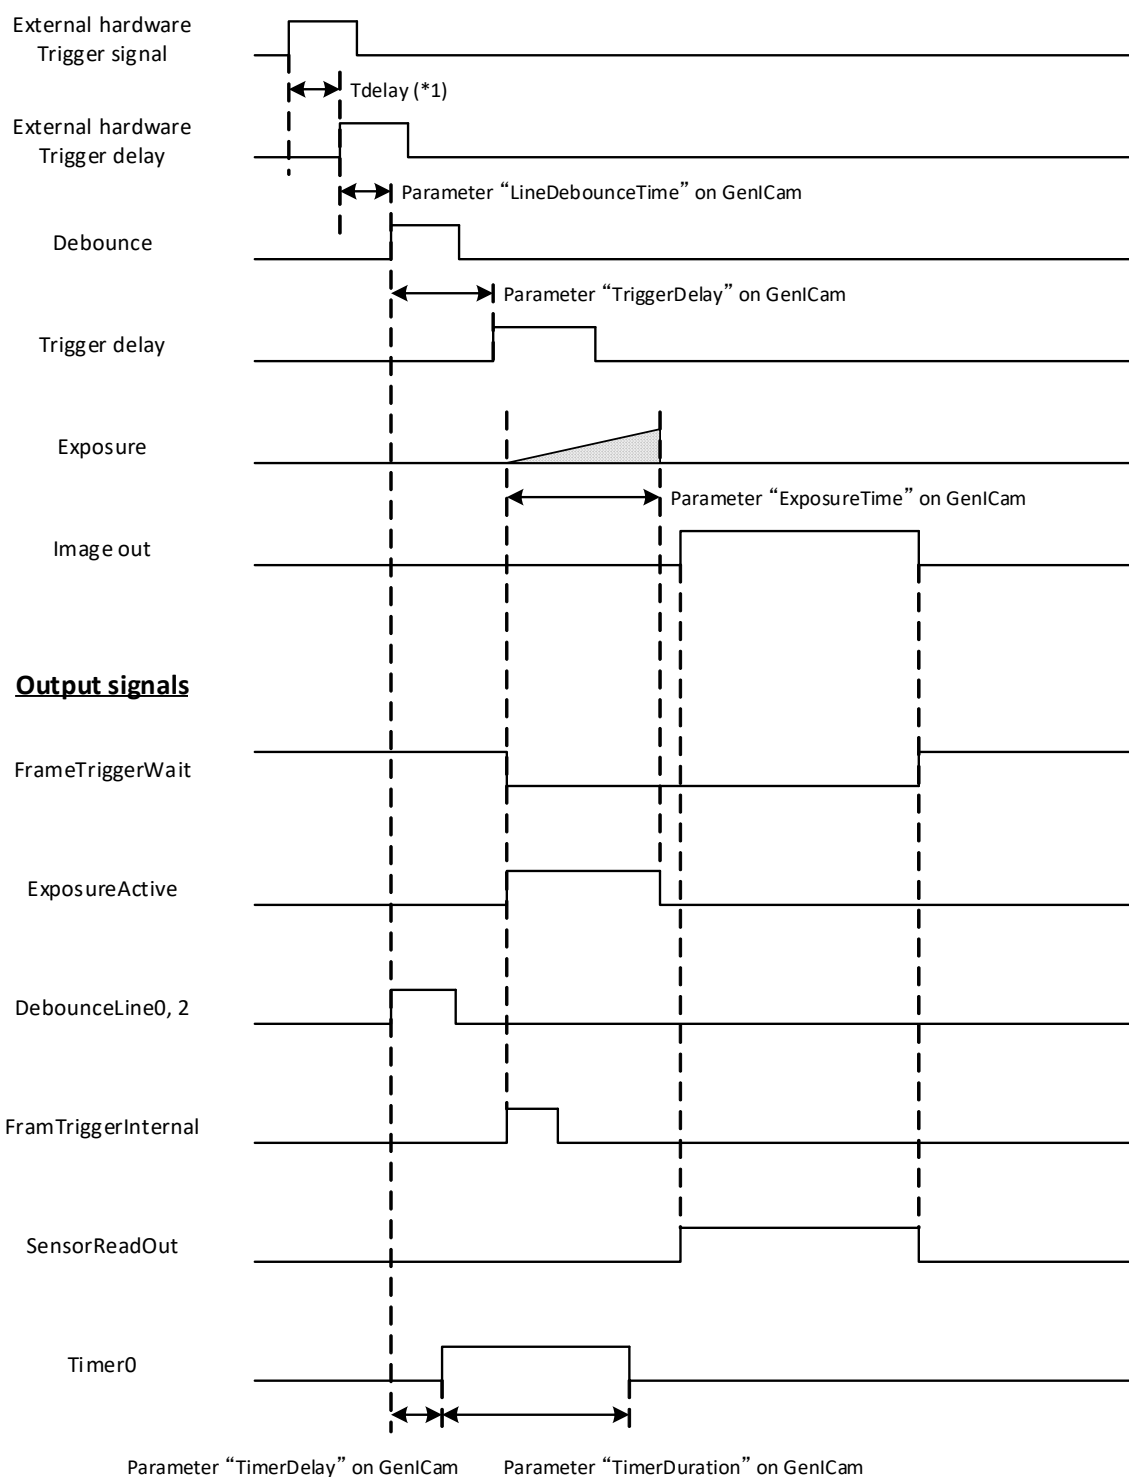


(*1) Please refers “5.2.6 External Hardware Trigger Input Delay” for more details about “External hardware trigger delay”

6.2.5 Input and Output Signal Timing (Software Trigger)

Case of "Software Trigger", "Timed Exposure Mode" and "Positive Edge Trigger"


Camera internal processing

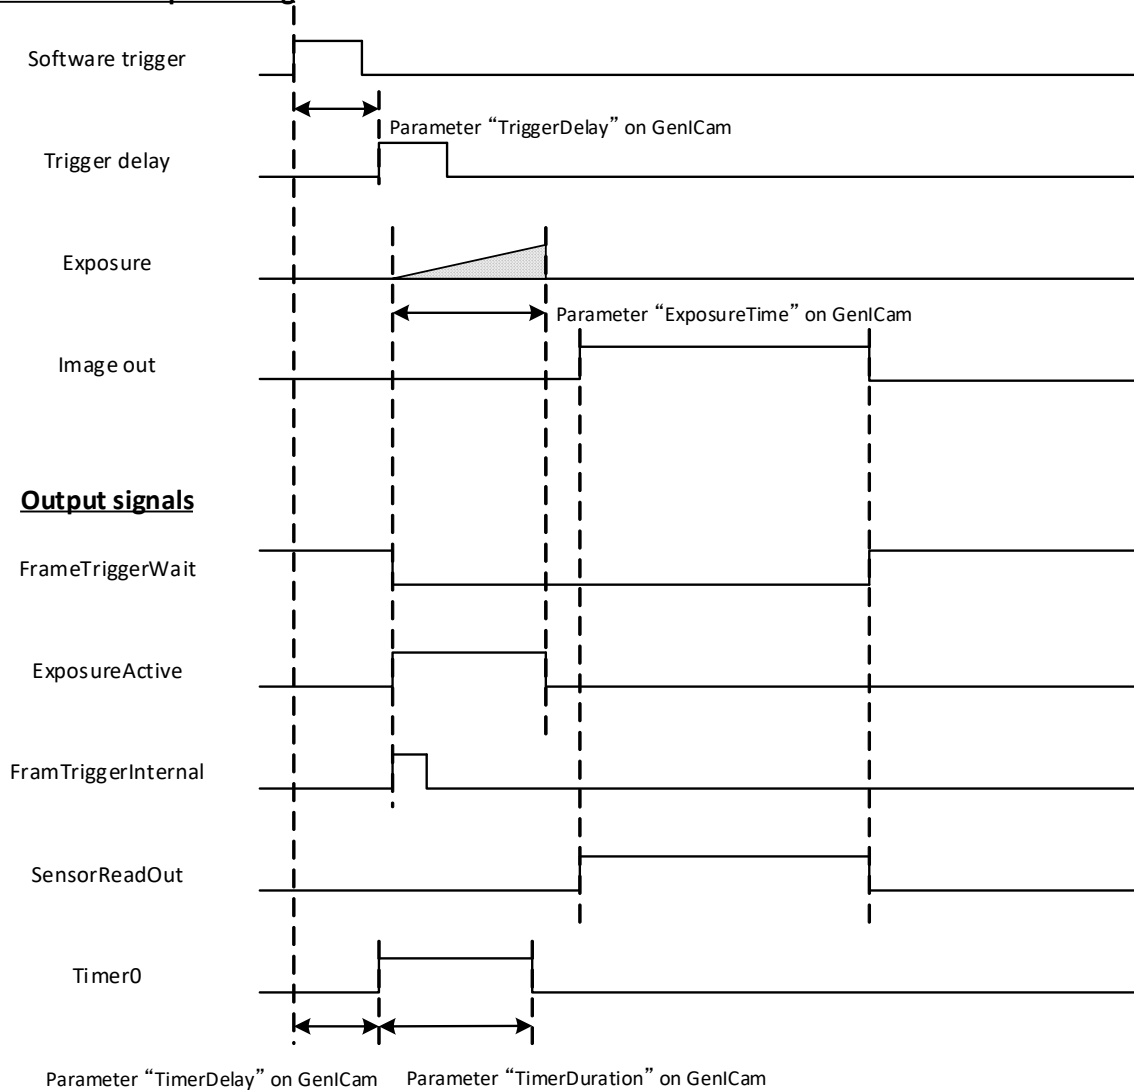


6.2.6 External Hardware Trigger Input Delay

The input trigger signal has some delay inside camera by photo coupler or transistor.
Please refers example measurement of delay in below.

6.2.6.1 External Trigger Signal Delay (Positive polarity trigger signal)

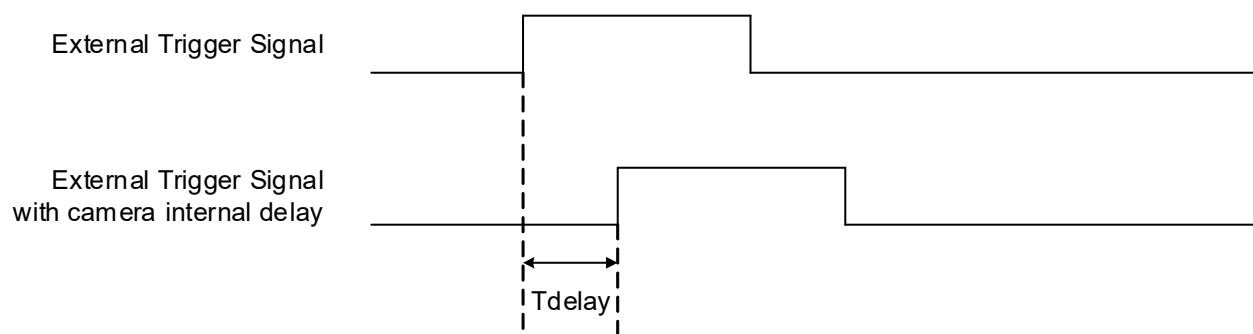


6.2.6.2 External Trigger Signal Delay (Negative polarity trigger signal)

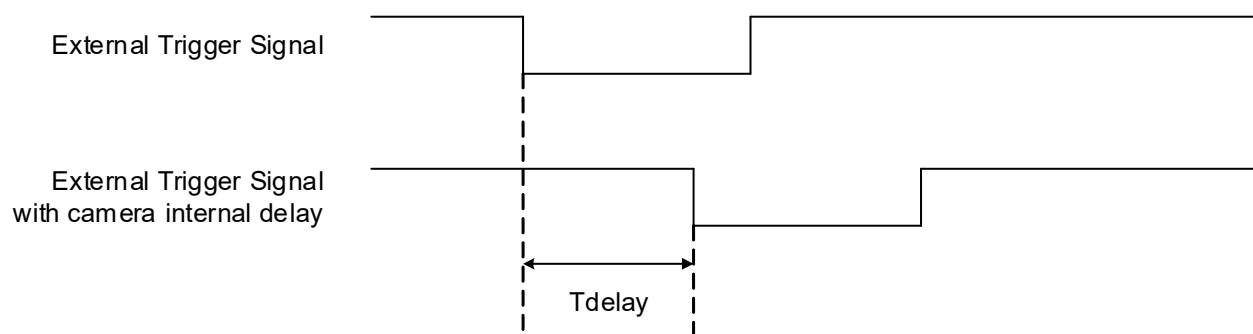

6.2.6.3 Measured External Trigger Signal Delay through Opt-Isolated Port (Line 0)

Measurement circuit

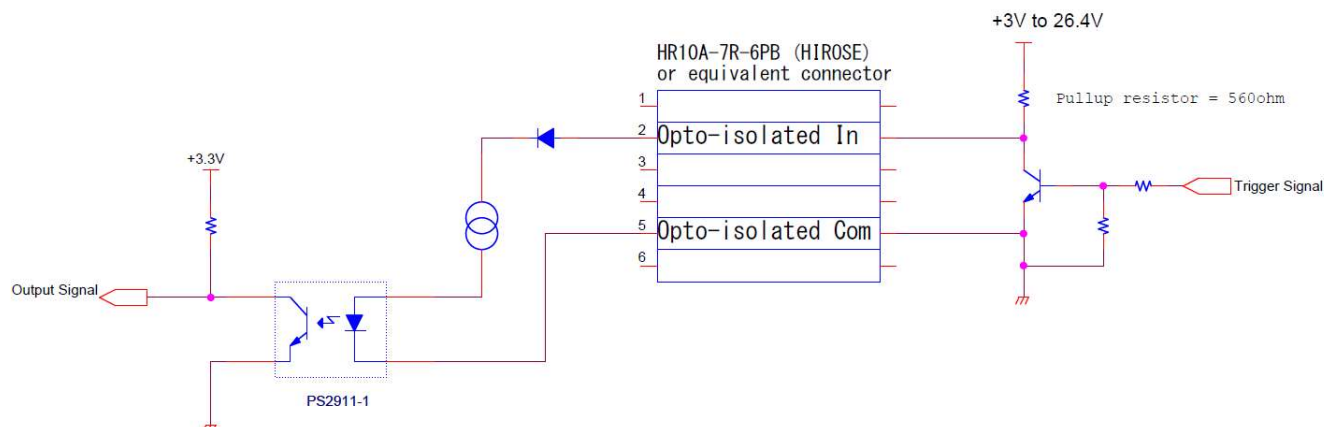

Positive polarity trigger signal

| Pull-up voltage | Tdelay | Minimum active pulse duration |
|-----------------|-------------------|-------------------------------|
| +3.3 V | 8.2 μ seconds | 6 μ seconds |
| +12 V | 4.6 μ seconds | 3 μ seconds |
| +24 V | 4.4 μ seconds | 2 μ seconds |


Negative polarity trigger signal

| Pull-up voltage | Tdelay | Minimum active pulse duration |
|-----------------|--------------------|-------------------------------|
| +3.3 V | 47 μ seconds | 6 μ seconds |
| +12 V | 53.2 μ seconds | 3 μ seconds |
| +24 V | 53.2 μ seconds | 2 μ seconds |

Note. Please use this measured delay as reference. The delay time may fluctuate depending on photo coupler variation, pull-up voltage and pull-up resistor.

6.2.6.4 Measured External Trigger Signal Delay through Open Collector GPIO Port (Line 2)

Measurement circuit

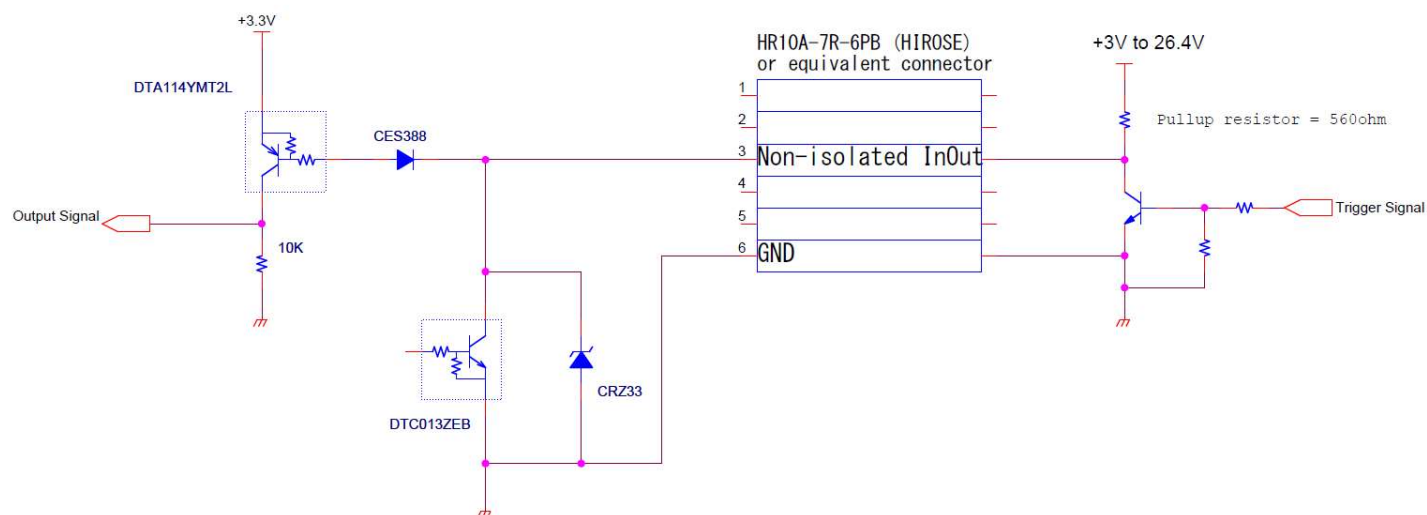

Positive polarity trigger signal

| Pull-up voltage | Tdelay | Minimum active pulse duration |
|-----------------|-------------------|-------------------------------|
| +3.3 V | 3.9 μ seconds | 6 μ seconds |
| +12 V | 3.8 μ seconds | 3 μ seconds |
| +24 V | 2.2 μ seconds | 2 μ seconds |


Negative polarity trigger signal

| Pull-up voltage | Tdelay | Minimum active pulse duration |
|-----------------|-------------------|-------------------------------|
| +3.3 V | 0.6 μ seconds | 6 μ seconds |
| +12 V | 0.8 μ seconds | 3 μ seconds |
| +24 V | 0.8 μ seconds | 2 μ seconds |

Note. Please use this measured delay as reference. The delay time may fluctuate depending on transistor variation, pull-up voltage and pull-up resistor.


7 Dimensions

7.1 STC-MBS312POE

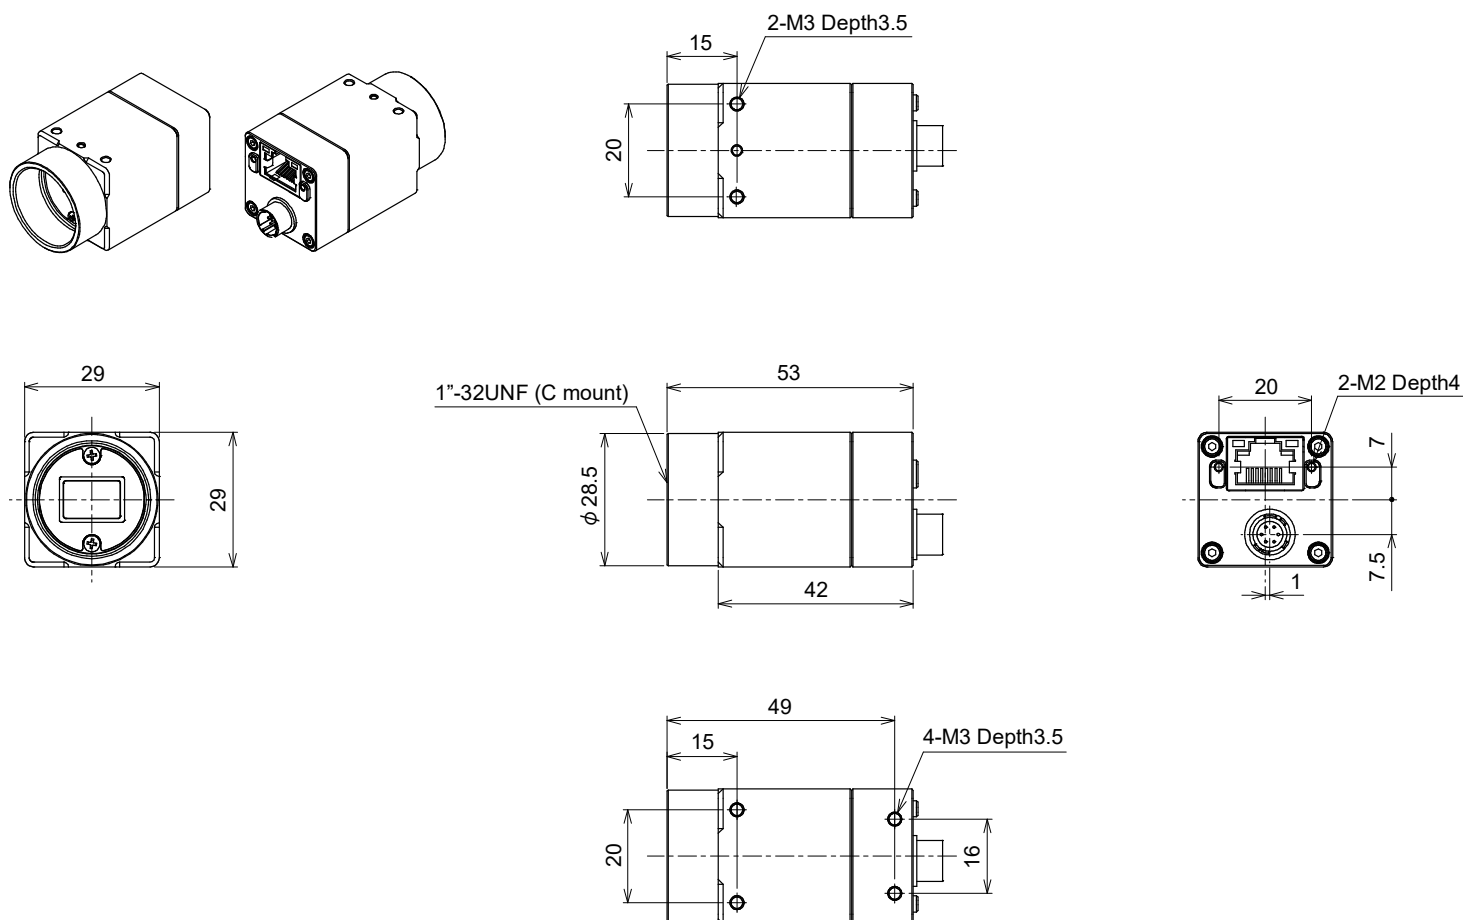

Unit: mm

7.2 STC-MCS312POE

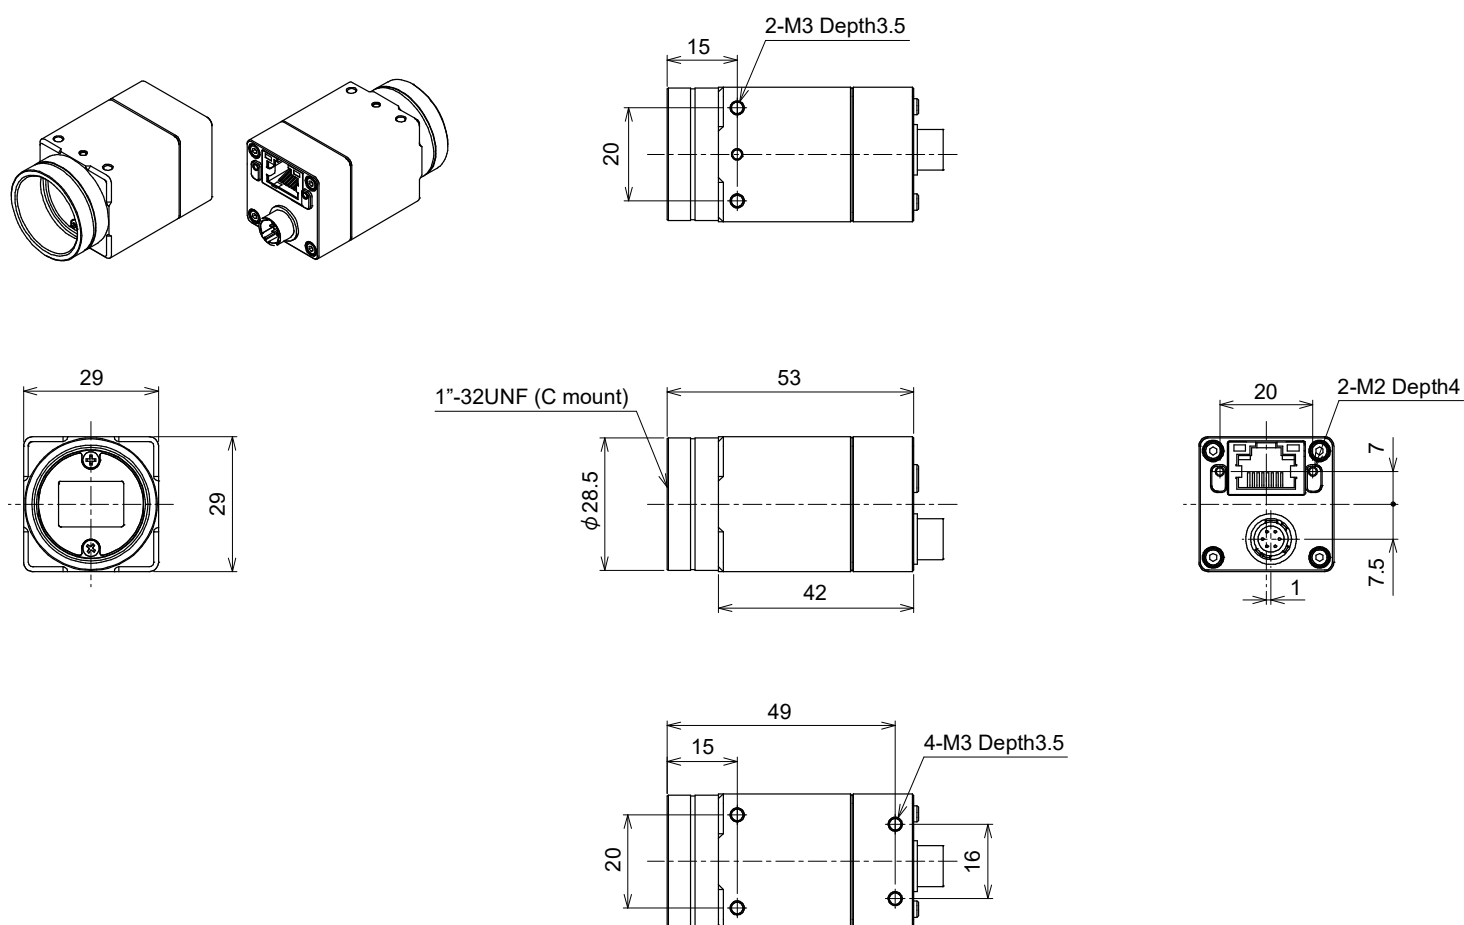


Unit: mm

8 Sensor Information


8.1 Pixel Transferring Image

STC-MBS312POE (Monochrome)

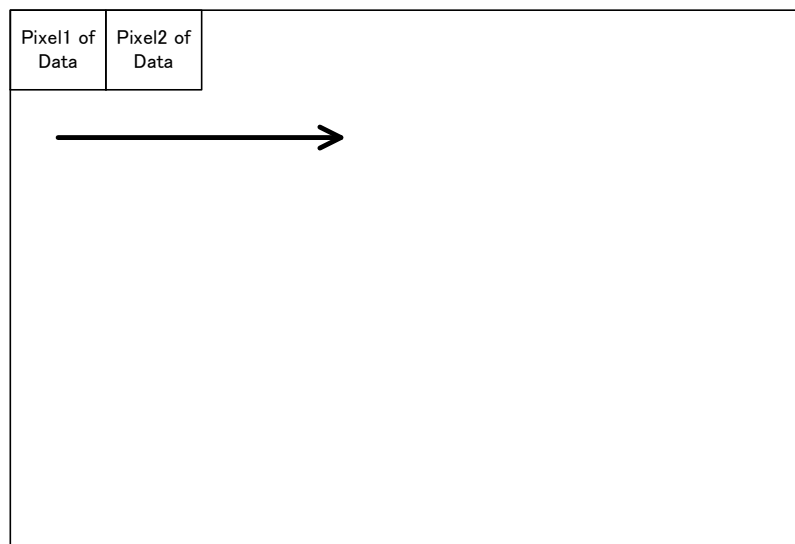

Pixel (m) of Data: mth pixel being transferred


STC-MCS312POE (Color)

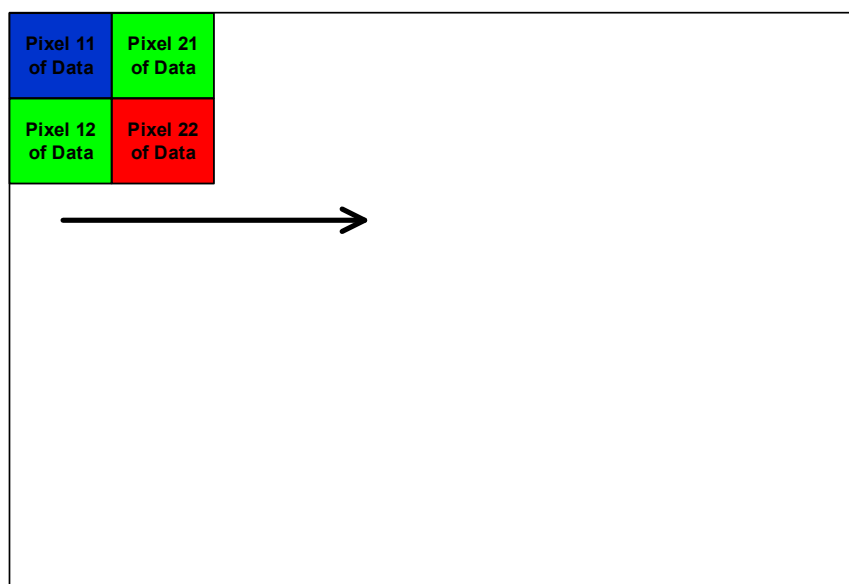

Pixel (m, n) of Data: mth pixel of nth line being transferred

9 Camera Operational Modes

9.1 Normal Mode

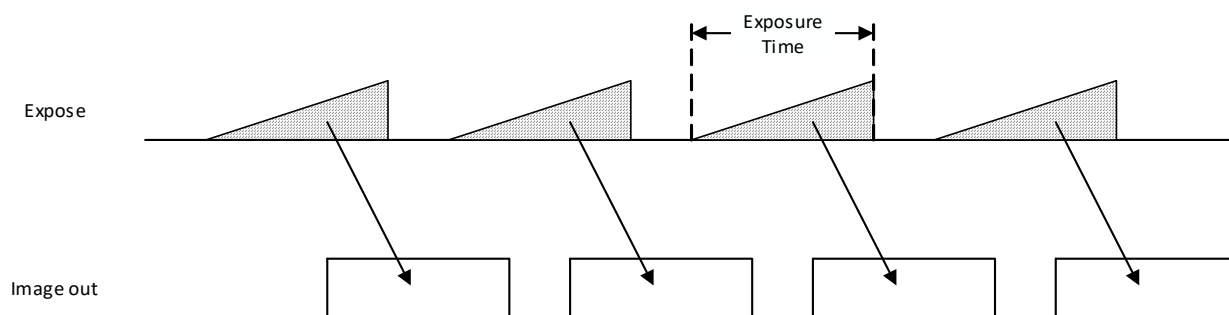


* The exposure time for each line is same.

9.2 Pulse width trigger mode

In this trigger mode with positive polarity, the expose starts at rising edge of trigger signal and stops at falling edge of trigger signal. The expose period is high states of trigger signal.

In this trigger mode with negative polarity, the expose starts at falling edge of trigger signal and stops at rising edge of trigger signal. The expose period is low states of trigger signal.


9.2.1 Timing

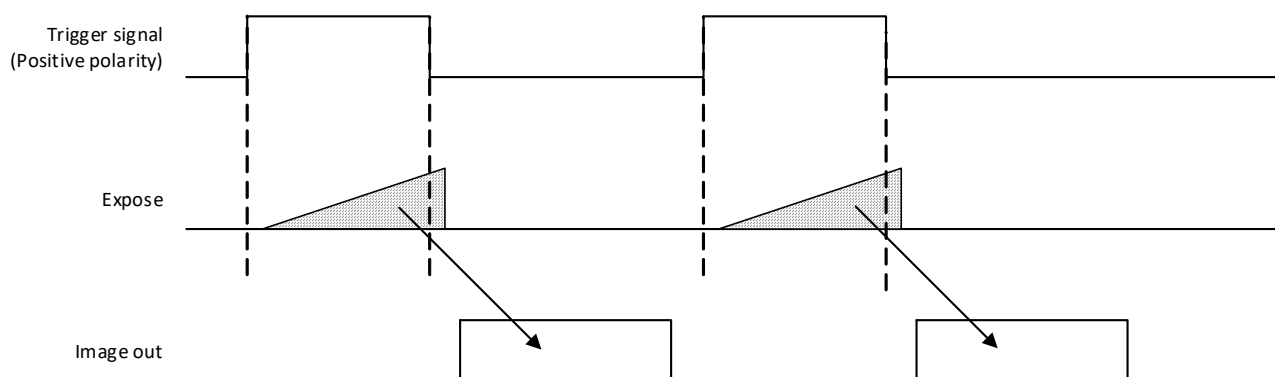

Note: The exposure time is active pulse duration of trigger signal.

Please refers "Exposure Timing" for more details.

9.2.2 Exposure Timing with Positive Polarity Trigger Signal

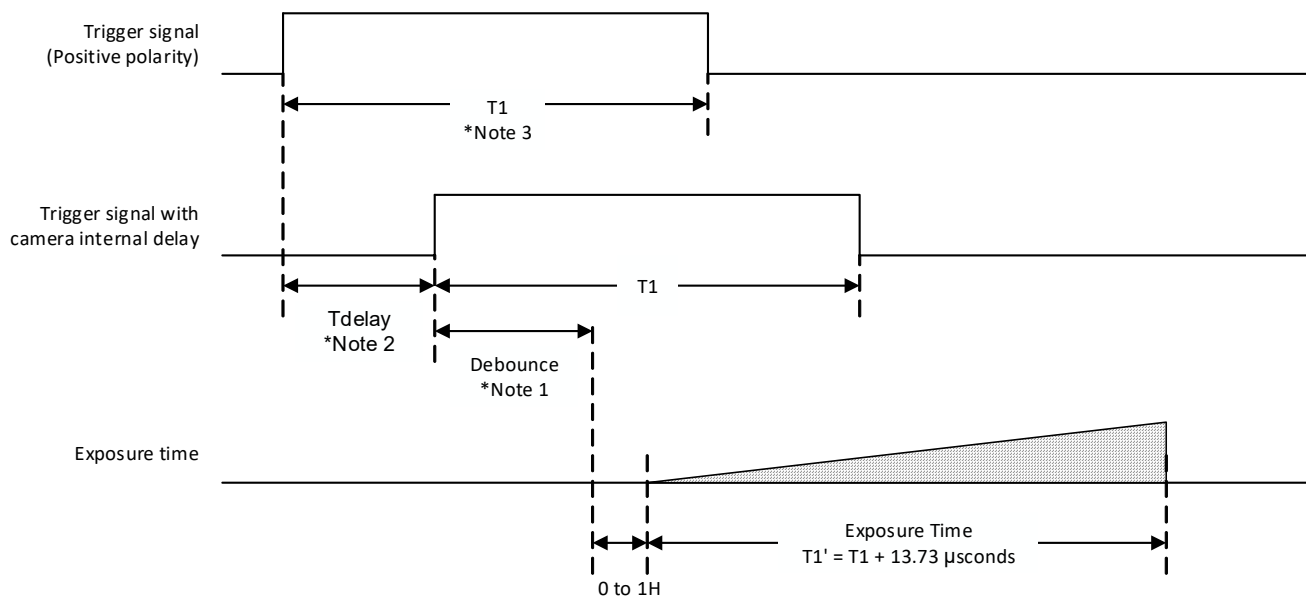


Note 1: The trigger signal will be removed by filtering if active pulse width of input trigger signal is less than “Line Debounce Time” setting time. Please input trigger signal has more than “Line Debounce Time” time active pulse width trigger signal.

Note 2: Please refers “5.2.6 External Hardware Trigger Input Delay” for more details about “External hardware trigger delay”.

Note 3: Please refers “5.2.6 External Hardware Trigger Input Delay” for shortest active pulse duration of trigger signal.

9.2.3 Exposure Timing with Negative Polarity Trigger Signal

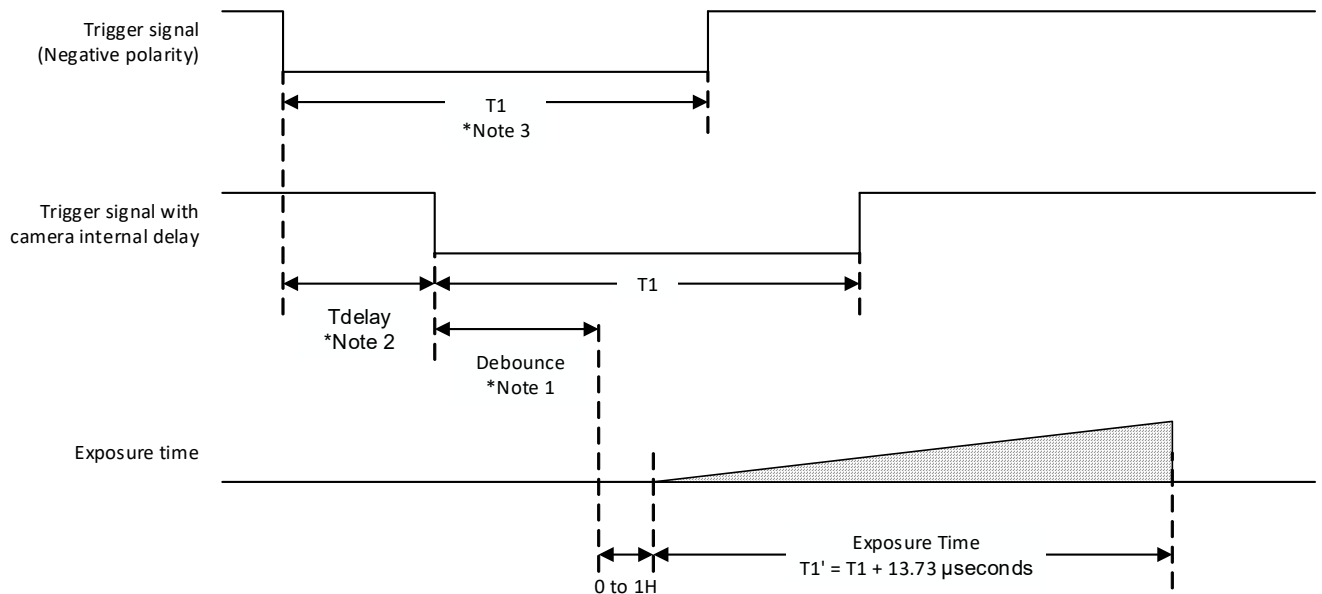

Note 1: The trigger signal will be removed by filtering if active pulse width of input trigger signal is less than “Line Debounce Time” setting time. Please input trigger signal has more than “Line Debounce Time” time active pulse width trigger signal.

Note 2: Please refers “5.2.6 External Hardware Trigger Input Delay” for more details about “External hardware trigger delay”.


Note 3: Please refers “5.2.6 External Hardware Trigger Input Delay” for shortest active pulse duration of trigger signal.

9.3 Edge Preset Trigger Mode

In this trigger mode with positive polarity, the expose starts at rising edge of trigger signal. The exposure duration time is based on preset exposure setting stored by camera setting communication.


In this trigger mode with negative polarity, the expose starts at falling edge of trigger signal. The exposure duration time is based on preset exposure setting stored by camera setting communication.

9.3.1 Timing

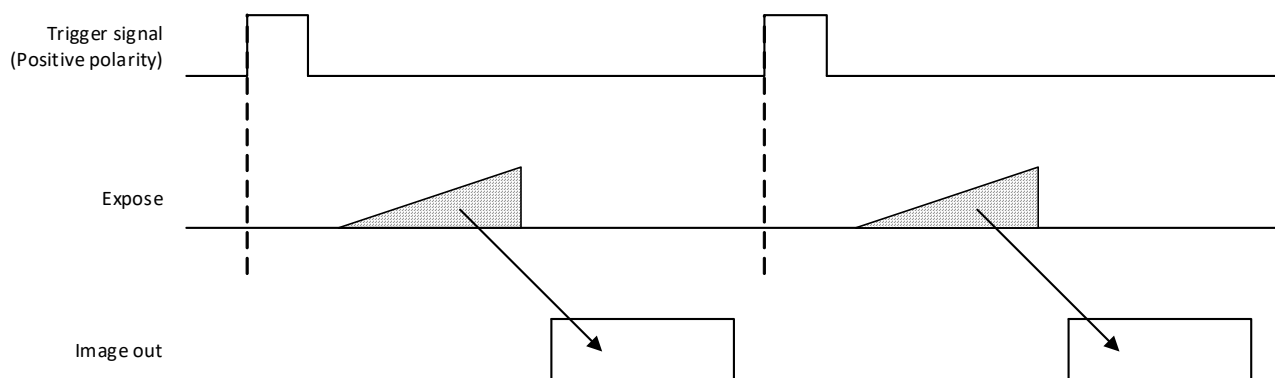

Note: The exposure time is "Exposure Time" on GenICam setting.


9.3.2 Exposure Timing with Positive Polarity Trigger Signal

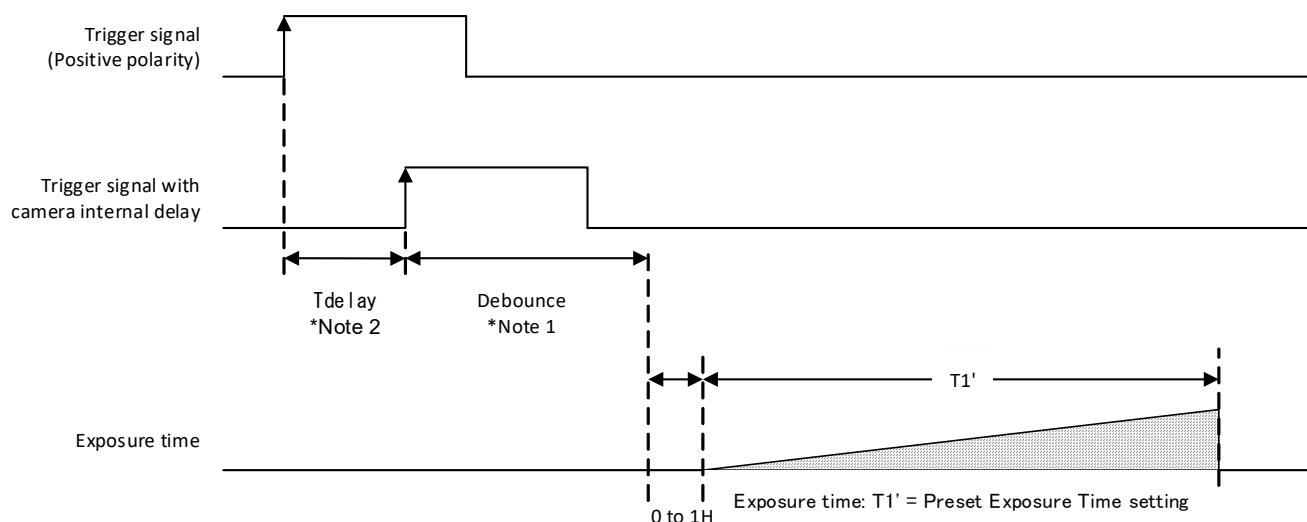

Note 1: The trigger signal will be removed by filtering if active pulse width of input trigger signal is less than “Line Debounce Time” setting time. Please input trigger signal has more than “Line Debounce Time” time active pulse width trigger signal.

Note 2: Please refers “5.2.6 External Hardware Trigger Input Delay” for more details about “External hardware trigger delay”.

9.3.3 Exposure Timing with the Negative Polarity Trigger signal

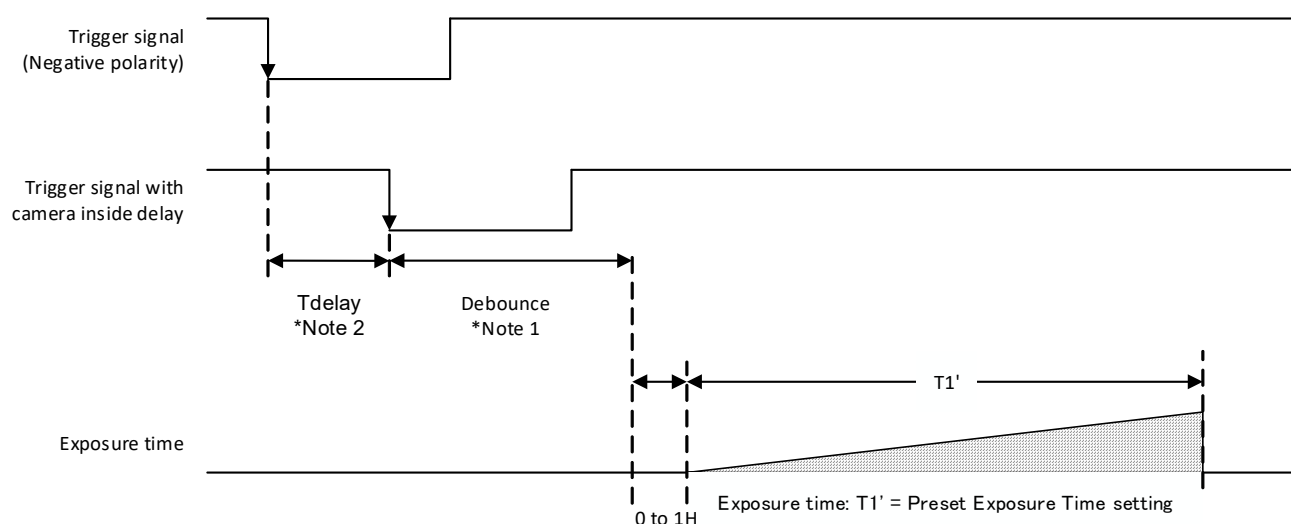

Note 1: The trigger signal will be removed by filtering if active pulse width of input trigger signal is less than “Line Debounce Time” setting time. Please input trigger signal has more than “Line Debounce Time” time active pulse width trigger signal.

Note 2: Please refers “5.2.6 External Hardware Trigger Input Delay” for more details about “External hardware trigger delay”.


9.4 Edge Preset Trigger Mode (Trigger input while image is out)

In this trigger mode with positive polarity, the expose starts at rising edge of trigger signal. The exposure duration time is based on the preset exposure setting stored by camera setting communication.

In this trigger mode with negative polarity, the expose starts at falling edge of trigger signal. The exposure duration time is based on the preset exposure setting stored by camera setting communication.

However, if the trigger signal input while exposing with previous trigger signal or output image, trigger signal is disregarded.

9.4.1 Timing

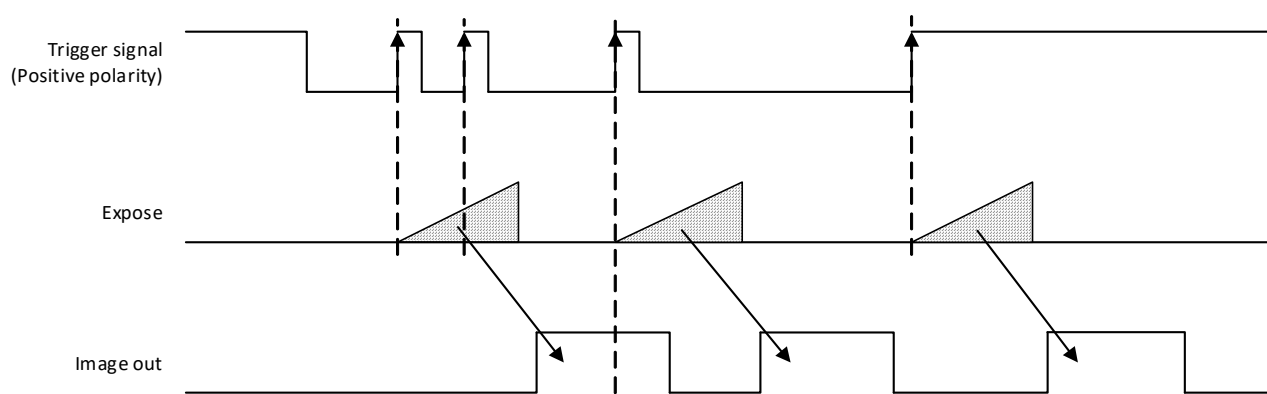

Note: The exposure time is "Exposure Time" on GenICam setting.

10 Camera Functions

10.1 Save and load the camera settings

The camera has the camera setting save function, and camera setting including factory default loads function.

The camera has below two type of camera settings.

Default: The factory default settings (This setting cannot change)

User Set X: Over writeable camera settings (X: 0 to 7)

These camera settings load from ROM to register in RAM on camera, and camera settings at register in RAM on camera save to ROM.


The camera settings saving and loading are controllable with Parameters ("User Set Selector", "User Set Default Selector"), and commands ("User Set Load", "User Set Save") in "User Set Control" category of GenICam.

The details of the parameters and the functions are in the table below:

GenICam Parameters

| | | |
|------------------------|-------------------|---|
| UserSetSelector | IEnumeration Type | Select "Default" or "User Set X" "User Set Load" or "User Set Save" process for selected settings. |
| UserSetLoad | ICommand Type | The camera settings load from ROM to register in RAM. |
| UserSetSave | ICommand Type | The camera settings at register in RAM save to ROM. |
| UserSetDefaultSelector | IEnumeration Type | Select which settings ("Default" or "User Set X") load automatically when camera power is on. This selection saves automatically. |

10.1.1 Saving Camera Settings

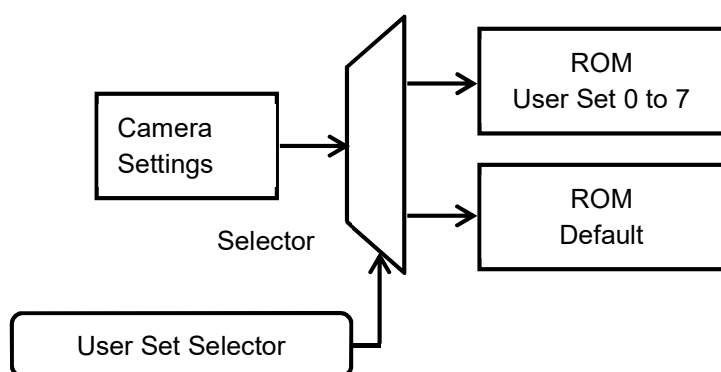

When executing "User Set Save", camera settings at the register in RAM are saved to the ROM that is selected at "User Set Selector".


Caution:

"User Set Save" CANNOT execute when "Default" was selected at "User Set Selector"

Setting Procedure

1. Selects "User Set X" at "User Set Selector"
2. Execute "User Set Save"

10.1.2 Loading Camera Settings

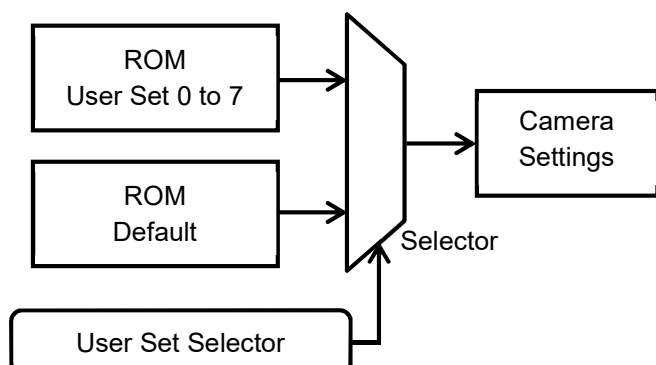


When executing “User Set Load”, camera settings load from selected ROM that was selected at “User Set Selector” to register at RAM.

Setting Procedure

1. Select “User Set X” (or Default) at “User Set Selector”
2. Execute “User Set Load”

10.1.3 Loading Camera Settings when Camera Power is on

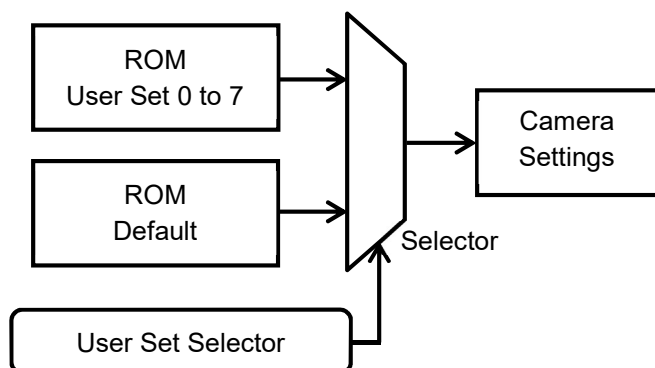

When the camera power is on, camera settings load from selected ROM that was selected at “User Set Default” to register at RAM.

Setting Procedure

1. Set “User Set X” or “Default” at “User Set Default”

10.1.4 Camera Settings Initialization

Please follow the procedure in below for camera settings put back to factory default settings.

Setting Procedure

1. Selects “Default” at “User Set Selector”.
2. Executes “User Set Load”.
3. Select “User Set X” at “User Set Selector”.
4. Executes “User Set Save”.

10.2 Frame rate

This parameter sets the frame rate (fps) of output image from camera.

GenICam Parameters

| | | |
|----------------------|-------------|---|
| AcquisitionFrameRate | IFloat Type | Sets frame rate in Hz unit (*1) Range is changed with exposure time setting Default: 34.9990478 |
|----------------------|-------------|---|

(*1) The approximate value of set value, sets to camera and display it.

10.3 Gain

The gain has Analog Gain, Digital Gain.

10.3.1 Analog Gain

This parameter sets analog gain.

Selects "Analog ALL" at "Gain Selector", sets gain at "Gain".

GenICam Parameters

| | | |
|--------------|-------------------|---|
| GainSelector | IEnumeration Type | Selects control gain Analog All: Analog Gain |
| Gain | IFloat Type | Analog Gain Range: 0 to 208 Default: 0 |

Analog Gain Formula

$$\text{Gain (dB)} = \text{"Gain"} / 10$$

10.3.2 Digital Gain

This parameter sets digital gain.

Selects "Digital ALL" at "Gain Selector", sets gain at "Gain".

GenICam Parameters

| | | |
|--------------|-------------------|---|
| GainSelector | IEnumeration Type | Selects control gain Digital All: Digital Gain |
| DigitalGain | IFloat Type | Digital Gain Range: 0 to 255 Default: 0 |

Digital Gain Formula

$$\text{Gain (x times)} = 1 + (\text{"Digital Gain"} / 128)$$

10.4 Exposure Time

This parameter sets variable exposure time.

The control method is selectable from

Manual exposure control, which uses preset exposure time.

Auto exposure control, which is maintain exposure time with brightness of target.

GenICam Parameters

| | | |
|--|-------------------|---|
| ExposureMode | IEnumeration Type | Exposure control selection Selection: "Off" and "Timed" Off: Exposure time is "1 / Frame rate" Timed: Exposure time is "Exposure Time" |
| ExposureTime [ExposureTime Selector] | IFloat Type | Exposure time (in μ second) (*1) Range: 1.000000 to 16,777,215.000000 Default: 28,404.000000 |
| ExposureAuto | IEnumeration Type | Auto exposure ON / OFF selection (*2) |

(*1) The approximate value of set value, sets to camera and display it.

(*2) Please sets range of auto exposure control with "Exposure Auto Limit Min" and "Exposure Auto Limit Max" when using auto exposure control.

10.5 Black Level

This parameter sets the black level (clamp level for black signal).

Sets the black level at "Black Level".

The lower limit of signal is clamped at this setting level. The signal does not lower than this.

GenICam Parameters

| | | |
|------------|-------------|---|
| BlackLevel | IFloat Type | Black Level Range: 12bits output: 0 to 240 10bits output: 0 to 60 8bits output: 0 to 15 Default: 0 |
|------------|-------------|---|

10.6 ALC (Auto Light Control)

ALC function has two control methods, which is AGC (Auto Gain Control) and auto shutter. The AGC and auto shutter can be set individually.

The camera parameters are adjusted to brightness of image is maintained with target brightness automatically with ALC function.

AGC or auto shutter have to set "On" to activate ALC function.

GenICam Parameters (for AGC and auto shutter)

| | | |
|------------------------------|------------------|--|
| AutoLuminanceTarget | Integer Type | Target brightness Range: 0 to 255 Default: 128 |
| AutoLuminanceRegion Selector | Enumeration Type | ALC weight region to set area, position and weight Selection: Region 0 to Region 8 |
| AutoLuminanceWidth | Integer Type | Width for selected ALC weight region Range: 4 to 2,048 Default: 661 for all regions |
| AutoLuminanceHeight | Integer Type | Height for selected ALC weight region Range: 2 to 1,536 Default: 488 for all regions |
| AutoLuminance OffsetX | Integer Type | Horizontal offset for selected ALC weight region Range: 0 to 2,044 Default: 32 (Region 0, 3 and 6), 693 (Region 1, 4 and 7), 1,354 (Region 2, 5 and 8) |
| AutoLuminance OffsetY | Integer Type | Vertical offset for selected ALC weight region Range: 0 to 1,534 Default: 36 (Region 0 to 2), 524 (Region 3 to 5), 1,012 (Region 6 to 8) |
| AutoLuminanceWeight | Integer Type | Weight Range: 0 to 15 Default: 1 * Sets 10 on Region 4 only Sets the weight for each weight area. |
| AutoLuminancePeak | Integer Type | Importance ratio for the brightness peak at ALC control. Range: 0 to 255 Default: 0 |

Target Brightness Formula (Auto Luminance Target)

12bits output: Target Brightness (Gradient) = "Auto Luminance Target" × 16

10bits output: Target Brightness (Gradient) = "Auto Luminance Target" × 4

8bits output: Target Brightness (Gradient) = "Auto Luminance Target"

About the importance ratio for brightness peak at ALC control (Auto Luminance Peak)

When setting 0, Average: 100 %, Peak: 0 %. The ALC control with brightness average.


When setting 255, Average: 0 %, Peak: 100 %. The ALC control with brightness peak.

When setting 128, Average: 50 %, Peak: 50 %.

10.6.1 ALC control method

The ALC control with weight region 0 to 8.

The weight area setting parameters are in below:

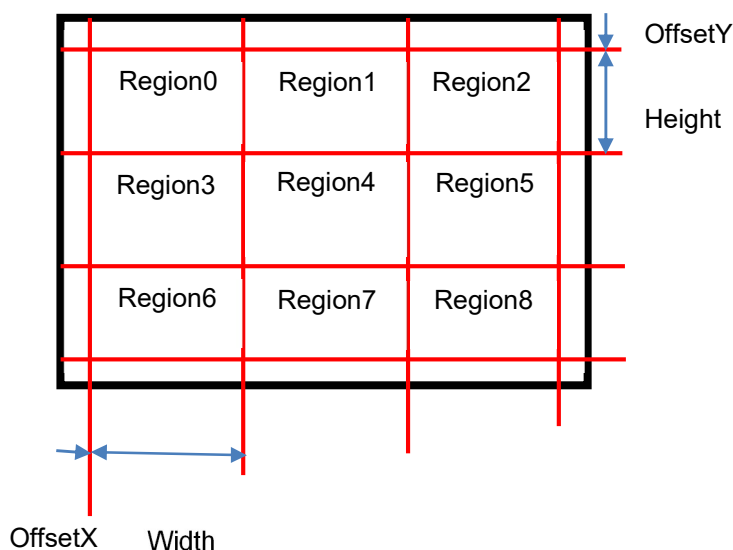

The brightness average and peak calculate for each weight area.

The target brightness comparison value calculates with "Auto Luminance Peak", the brightness average and peak then compare with target brightness to define necessary brightness control (to dark or to bright). The brightness of image maintains to "Auto Luminance Target" with AGC and auto shutter functions.

If AGC and auto shutter are ON for ALC control, auto shutter function maintains brightness first. The AGC function maintains brightness if brightness cannot maintain to "Auto Luminance Target" with auto shutter.

10.6.2 AGC (Auto Gain Contorl)

The brightness of image maintains to keep target brightness with gain automatically.

If the brightness of image is darker than target brightness, gain increases up to "Gain Auto Limit Max".

If the brightness of image is brighter than target brightness, gain decreases.

GenICam Parameters

| | | |
|------------------------------------|-------------------|--|
| GainSelector | IEnumeration Type | Adjustable gain selection Selected gain can be adjusting by Gain[GainSelector]. Please select "Analog All" when AGC is turned on. Selection: "Analog All" (analog gain) and "Digital All" (digital gain) Default: "Analog All" |
| Gain[GainSelector] | IFloat Type | Gain Selected gain at "Gain Selector" is adjusting Analog gain: Range: 0 to 208 Default: 0 Digital gain: Range: 0 to 255 Default: 0 Analog gain cannot adjustable when AGC is turned on. |
| GainAuto [GainSelector] | IEnumeration Type | AGC ON / OFF selection Selection: "ON" (Continuous) and "OFF" (Off) Default: OFF |
| GainAutoLimitMin [GainSelector] | IFloat Type | Minimum gain for AGC Range: 0 to 208 Default: 0 This cannot be set greater than "Gain Auto Limit Max" |
| GainAutoLimitMax [GainSelector] | IFloat Type | Maximum gain for AGC Range: 0 to 208 Default: 208 This cannot be set smaller than "Gain Auto Limit Min" |

10.6.3 Auto shutter

The brightness of image maintains to keep target brightness with shutter automatically.

If the brightness of image is darker than target brightness, exposure time extends up to "Exposure Auto Limit Max".

If the brightness of image is brighter than target brightness, exposure time becomes shorter up to "Exposure Auto Limit Min".

GenICam Parameters

| | | |
|----------------------|-------------------|---|
| ExposureAuto | IEnumeration Type | Auto shutter ON / OFF selection Selection: "ON" (Continuous), "OFF" (Off) Default: "OFF" |
| ExposureAutoLimitMin | IFloat Type | Minimum exposure time (in μ second) for auto shutter Range: 1 to 16,777,215 Default: 14 |
| ExposureAutoLimitMax | IFloat Type | Maximum exposure time (in μ second) for auto shutter Range: 1 to 16,777,215 Default: 28,404 |

10.6.4 ALC settings procedure

ALC Settings Procedure

1. Sets "Auto Luminance Width", "Auto Luminance Height", "Auto Luminance Offset X", "Auto Luminance Offset Y" and "Auto Luminance Weight" for "Auto Luminance Region 0 to 8".
2. Sets "Continuous" for "Gain Auto" when using AGC function.
3. Sets "Gain Auto Limit Min" and "Gain Auto Limit Max" when using AGC function.
4. Sets "Continuous" for "Exposure Auto" when using auto shutter function.
5. Sets "Exposure Auto Limit Min" and "Exposure Auto Limit Max" when using auto shutter function.
6. Sets "Auto Luminance Target".

10.7 White balance (Only available for color camera)

The color compensates with gain adjustment each color.

The gain for each color has to adjust each color has same brightness when taking flat white target.

The white balance control methods are listed in below:

OFF

Auto white balance

Push to set white balance

Preset 0 to 2

10.7.1 White balance control methods

GenICam Parameters

| | | |
|----------------------|-------------------|--|
| BalanceRatioSelector | IEnumeration Type | White balance control target color selection Selection: "Red", "Green" and "Blue" |
| BalanceRatio | IFloat Type | Color gain setting for color selects at "Balance Ratio Selector" Range: 0 to 255 |
| BalanceWhiteAuto | IEnumeration Type | White balance control method selection. Selection: "Off", "Once", "Continuous", "Preset 0", "Preset 1" and "Preset 2" Default: "Off" |

10.7.2 White balance control method selection

OFF

The white balance with "Balance Ratio" setting for Red, Green and Blue.

If the white balance process is not necessary, please sets 0 for "Balance Ratio" for all colors.

White balance "OFF" setting procedure

1. Sets "Off" at "Balance White Auto".

Auto white balance

The optimized white balance gain calculates each frame for auto white balance.

Auto white balance setting procedure

1. Sets "Continuous" at "Balance White Auto".

Push to set white balance

The white balance gain adjusts once after select this white balance then set to "Balance Ratio" for all colors.

Sets "OFF" at "Balance White Auto" automatically after sets "Balance Ratio" for all colors.

Push to set white balance setting procedure

1. Sets the flat white target then acquires image.
2. Sets "Once" at "Balance White Auto".

Preset white balance 0 to 2

The camera has three preset manual white balances.

Preset white balance setting procedure

1. Selects "Preset 0" to "Preset 2" at "Balance White Auto".
2. Selects adjusting color from Red, Green or Blue at "Balance Ratio Selector".
3. Sets gain for selected adjusting color at "Balance Ratio".

The settings can be save into camera with "User Set Control" function.


10.7.3 White balance calculate region setting

The size and position for white balance gain calculation region are changeable.

GenICam Parameters

| | | |
|------------------------------------|-------------------|--|
| BalanceWhiteAuto RegionSelector | IEnumeration Type | White balance gain calculation region selection Selection: Region 0 |
| BalanceWhiteAuto Width | Integer Type | Width (horizontal size, in pixel) for white balance gain calculation region Range: 1 to 2,048 Default: 2,048 |
| BalanceWhiteAuto Height | Integer Type | Height (vertical size, in line) for white balance gain calculation region Range: 1 to 1,536 Default: 1,536 |
| BalanceWhiteAuto XOffset | Integer Type | Horizontal offset (in pixel) for region 0 Range: 0 to 2,047 Default: 0 |
| BalanceWhiteAuto YOffset | Integer Type | Vertical offset (in line) for region 0 Range: 0 to 1,535 Default: 0 |

The white balance calculation region settings are like below:

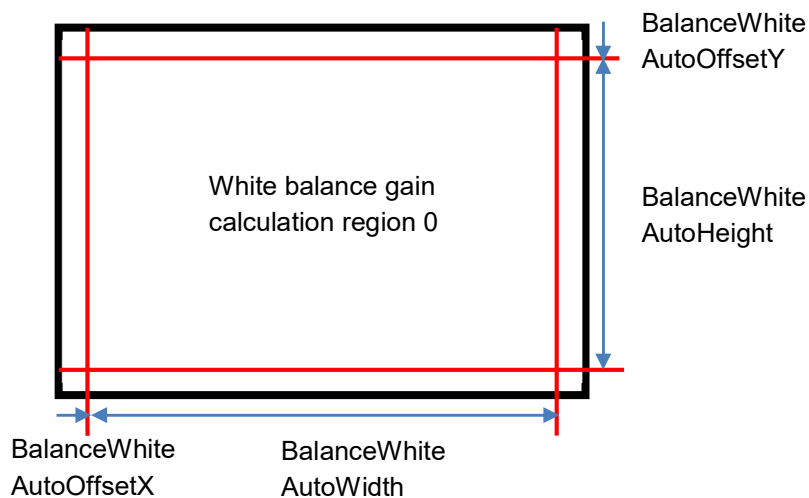

10.8 Gamma correction

The gamma correction is changeable.

GenICam Parameters

| | | |
|-------|-------------|---|
| Gamma | IFloat Type | Gamma correction Range: 0 to 4.0 Default: 1.0 |
|-------|-------------|---|


10.9 ROI (Region of Interest)

The specified region of image can be output from camera with ROI function.

GenICam Parameters

| | | |
|---------|--------------|---|
| Width | Integer Type | Width (horizontal size) of output image (in pixel) Range: 264 to 2,048 Default: 2,048 Adjustable steps: 8 ("Width" + "Offset X") should not exceeded maximum width. |
| Height | Integer Type | Height (vertical size) of output image (in line) Range: 4 to 1,536 Default: 1,536 Adjustable steps: 4 ("Height" + "Offset Y") should not exceeded maximum height. |
| OffsetX | Integer Type | Horizontal offset for output image (in pixel) Range: 0 to 1,784 Default: 0 Adjustable steps: 8 |
| OffsetY | Integer Type | Vertical offset for output image (in line) Range: 0 to 1,532 Default: 0 Adjustable steps: 4 |

The ROI region settings are below:

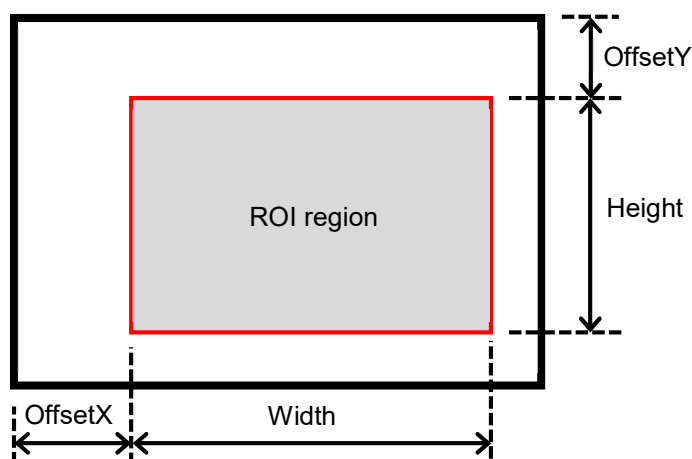

10.10 Pixel Format

The image format from camera can be set on Pixel Format.

GenICam Parameters

| | | |
|-------------|-------------------|--------------|
| PixelFormat | IEnumeration Type | Pixel Format |
|-------------|-------------------|--------------|

The following chart shows the available Pixel Formats on camera:

| Output Bits | Pixel Format | | |
|---------------|------------------------------------|-------------------------------|-----------------|
| | Monochrome Camera STC-MBS312POE | Color Camera STC-MCS312POE | |
| 8bits | Mono8 | Mono8 | BayerRG8 |
| 10bits | Mono10 | Mono10 | BayerRG10 |
| 10bits Packed | Mono10Packed | Mono10Packed | BayerRG10Packed |
| 12bits | Mono12 | Mono12 | BayerRG12 |
| 12bits Packed | Mono12Packed | Mono12Packed | BayerRG12Packed |
| 8bits x 3 | N/A | RGB8 | |


Each format specified on GenICam PFNC (Pixel Format Naming Convention).

10.11 Decimation


When using Decimation mode, the decimated image can be output.

The images below show decimated pixels (red squares) where they are output.

<STC-MBS312POE>

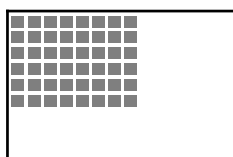


Decimation X (OFF), Y (OFF)

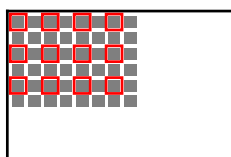


Decimation X (ON), Y (ON)

<STC-MCS312POE>

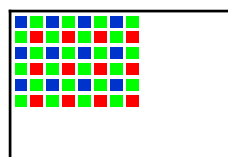

Decimation X (OFF), Y (OFF)

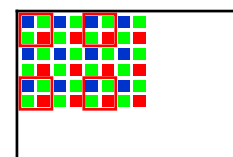

Decimation X (ON), Y (ON)

GenICam Parameter

| | | |
|----------------------|--------------|---|
| DecimationHorizontal | Integer Type | Sets decimation on horizontal direction Selection: 1: Disable Decimation, 2: Decimate one of two pixels Default: Disable Decimation |
| DecimationVertical | Integer Type | Sets decimation on vertical direction Selection: 1: Disable Decimation, 2: Decimate one of two pixels Default: Disable Decimation |

(*1) Decimation cannot change horizontal only or vertical only. Selection applies for horizontal and vertical.

(*2) It is necessary to change exposure time (to shorten exposure time), to increase frame rate when using Decimation.

10.12 Trigger


The trigger type (trigger source) is selectable at "Trigger Source" under "Acquisition Control".

The trigger type (trigger source) is listed in below table.

| | |
|-------------------|--|
| Software | Software trigger generates by "Trigger Software" |
| Software Signal 0 | Software trigger generates by "Software Signal Control" |
| Software Signal 1 | Software trigger generates by "Software Signal Control" |
| Action 0 | Action command trigger |
| Line 0 | Hardware trigger through "Line 0" |
| Line 2 | Hardware trigger through "Line 2" |
| Logic Block 0 | Trigger generates by "Logic Block Control" Please refers "Trigger signal processing procedure" for more details |

10.12.1 Trigger signal processing procedure

The camera internal process for external hardware trigger signal or software trigger signal input is below:

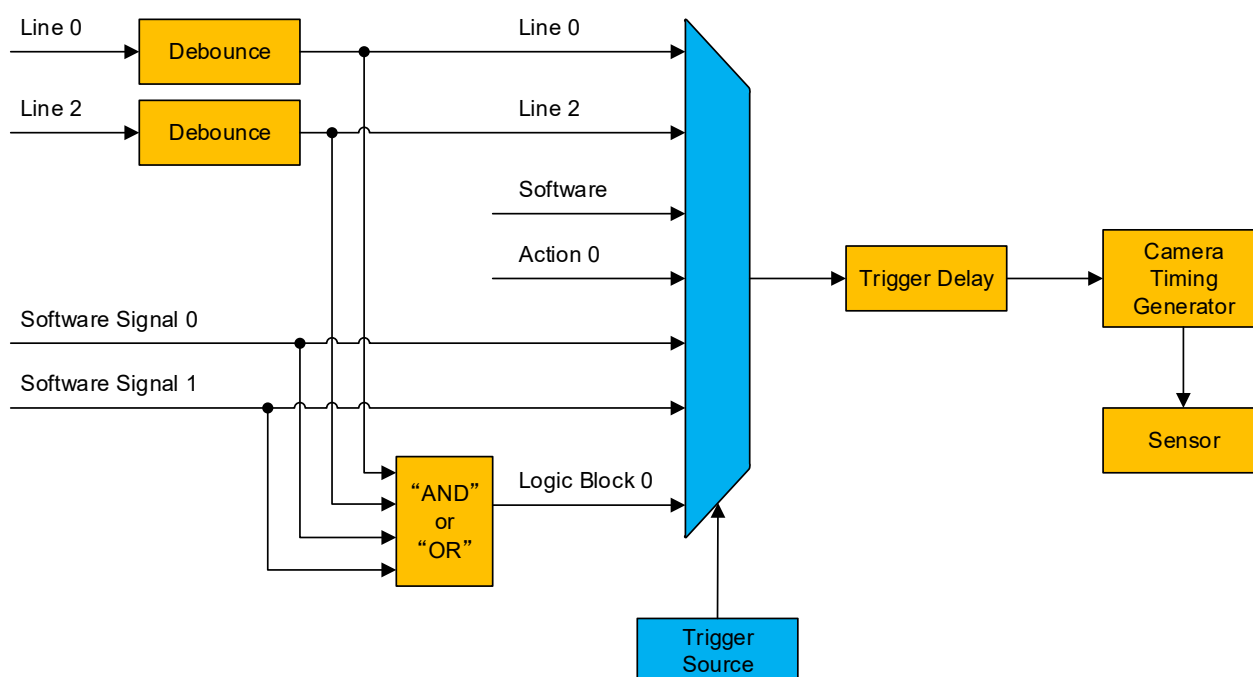

The trigger signal is selectable by GenICam commands.

Trigger Source: select trigger type

10.13 Image Flip

The horizontal flip image can be selected by "Reverse X".

The vertical flip image can be selected by "Reverse Y".

GenICam Parameters


| | | |
|----------|---------------|--|
| ReverseX | IBoolean Type | Horizontal flip image ON / OFF selection Selection: "False" (Horizontal flip is Off), "True" (Horizontal flip is On) Default: "False" (Horizontal flip is Off) |
| ReverseY | IBoolean Type | Vertical flip image ON / OFF selection Selection: "False" (Vertical flip is Off), "True" (Vertical flip is On) Default: "False" (Vertical flip is Off) |

10.14 LUT Control

The output signal assigned table for input signal.

GenICam Parameters

| | | |
|--------------|-------------------|---|
| LUT Selector | IEnumeration Type | Control LUT selection (Luminance is only selectable) Default: Luminance |
| LUT Enabled | IBoolean Type | LUT ON / OFF selection |
| LUT Index | IInteger Type | Index for LUT Range: 0 to 4,095 |
| LUT Value | IInteger Type | The output value for input value that specifies by index Range: 0 to 4,095 |

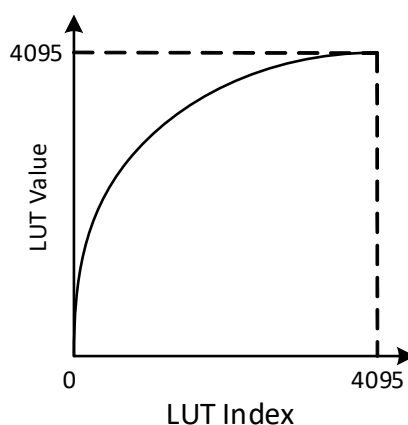

e.g. LUT usage (low brightness level enhancement)

10.15 Defective pixel correction

The selected position of defective pixel is correcting with adjacent pixel information.

The selected position of defective pixel of color camera is correcting with adjacent same color of pixel information.

GenICam Parameters

| | | |
|----------------------------|--------------|---|
| PixelCorrectionAll | Boolean Type | Defective pixel correction ON / OFF selection Selection: "True" (On), "False" (Off) Default: "True" |
| PixelCorrection Enabled | Boolean Type | Defective pixel correction ON / OFF selection for selected index Selection: "True" (On), "False" (Off) Default: "False" (Off) |
| PixelCorrection Index | Integer Type | Index for process defective pixel correction Range: 0 to 2,047 Default: 0 |
| PixelCorrectionX | Integer Type | Horizontal position for selected index for process defective pixel correction Range: 0 to 2,047 Default: 0 |
| PixelCorrectionY | Integer Type | Vertical position for selected index for process defective pixel correction Range: 0 to 1,535 Default: 0 |

10.16 Counter And Timer Control

Controls “Timer” and “Counter”.

A) Timer Control

GenICam Parameters

| | | |
|-------------------------|-------------------|---|
| TimerSelector | IEnumeration Type | Fixed as “Timer 0” |
| TimerDelay | IFloat Type | Delay for “Timer 0 active” signal (in μ second) Range: 0 to 16,777,215 Default: 0 |
| TimerDuration | IFloat Type | Duration of “Timer 0 active” signal (in μ second) Range: 1 to 16,777,215 Default: 1 |
| TimerTrigger Source | IEnumeration Type | Reference signal selection to generate “Timer 0 active” signal Default: “Off” |
| TimerTrigger Activation | IEnumeration Type | Polarity of reference signal to generate “Timer 0 active” signal Default: “Rising Edge” |
| TimerValue | IFloat Type | Returns value for “Timer 0 active” signal |

When the timing of “Timer 0 active” signal is adjusting to active signal of Exposure, “Timer 0” can be used as strobe control signal.

B) Counter Control

GenICam Parameters


| | | |
|-------------------------|-------------------|--|
| CounterSelector | IEnumeration Type | Counter selection Default: “Counter 0” |
| CounterEvent Source | IEnumeration Type | Counter event source selection |
| CounterReset Source | IEnumeration Type | Reference signal selection to reset counter |
| CounterReset Activation | IEnumeration Type | Polarity of reference signal to reset counter |
| CounterReset | ICommand Type | Rest switch “Activate as switch when selecting “Software” at “Counter Reset Source” |
| CounterValue | Integer Type | Returns number of counter |

10.17 Event Control

The camera internal signal can be output as specified event information, like “exposure end”, to PC used by GVCP (GigE Vision Control Protocol).

e.g. Event control

Notified “Exposure End”

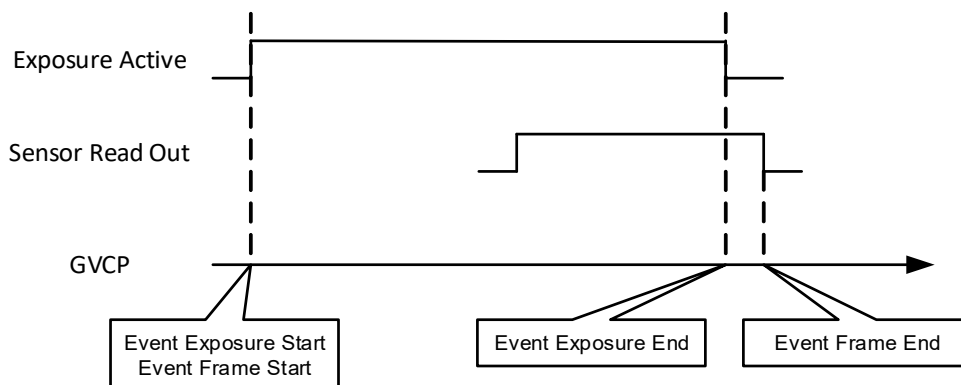

GenICam Parameters

| | | |
|--------------------|-------------------|--|
| Event Selector | IEnumeration Type | Event notification selection Selection: “Action Late”, “Frame Trigger”, “Exposure Start”, “Exposure End”, “Frame Start”, “Frame End”, “Block Discard”, “Line 0 Input Rising Edge”, “Line 0 Input Falling Edge”, “Line 2 Input Rising Edge” and “Line 2 Input Falling Edge” |
| Event Notification | IEnumeration Type | Event notification ON / OFF selection On: Enable event notification Off: Disable event notification |

10.18 Chunk Control

This function is attached additional image information to image data.

For example, the exposure time and gain information do not include in image data itself. However, Chunk data transfers these parameters when image was acquiring.

GenICam Parameters

| | | |
|-----------------|------------------|--|
| ChunkModeActive | Boolean Type | Chunk control ON / OFF selection Default: "False" (Off) |
| ChunkSelector | Enumeration Type | Transfer Chunk data selection Selection: "Image", "Offset X", "Offset Y", "Width", "Height", "Pixel Format", "Gain", "Exposure Time", "Black Level", "Line Status All", "Device Temperature", "Timer Value" and "Counter Value" |
| ChunkEnable | Boolean Type | Enable Chunk data that was selected at "Chunk Selector" Selection: "True" (Enable Chunk data) and "False" (Disable Chunk data) |

10.19 Action Control

The multiple cameras control by one action signal.

GenICam Parameters

| | | |
|-----------------|--------------|--|
| ActionQueueSize | Integer Type | Size of scheduled action command queue |
| ActionDeviceKey | Integer Type | Control identifier of camera |
| ActionSelector | Integer Type | Action command application selection Fixed as "0" |
| ActionGroupKey | Integer Type | Action command applies camera * The camera executes action command when group key of action command and group key of camera is matched. |
| ActionGroupMask | Integer Type | Select camera to apply action command Logical AND of Group Mask of camera and Group Mask of action command is 1 for any bit of 32bits, camera executes action command. |

10.20 IEEE1588

Precision Time Protocol (PTP) is implemented on camera, is synchronized to “Master Clock” in same network automatically.


The camera supports IEEE 1588-2008 of PTP Version 2. The accuracy of time (Timestamp) synchronized is different based on network system configuration.

1) BMC (Best Master Clock) function

BMC function is implemented on camera. The most accurate clock in same network is defined as “Master Clock” then time (Timestamp) synchronizes. If there are more than two devices has most accurate clock in same network, clock of smallest MAC address device is defined as “Master Clock”.

2) E2E (End-to-End) Transparent Clock

The camera supports E2E method. Time difference is correcting by blow algorithm

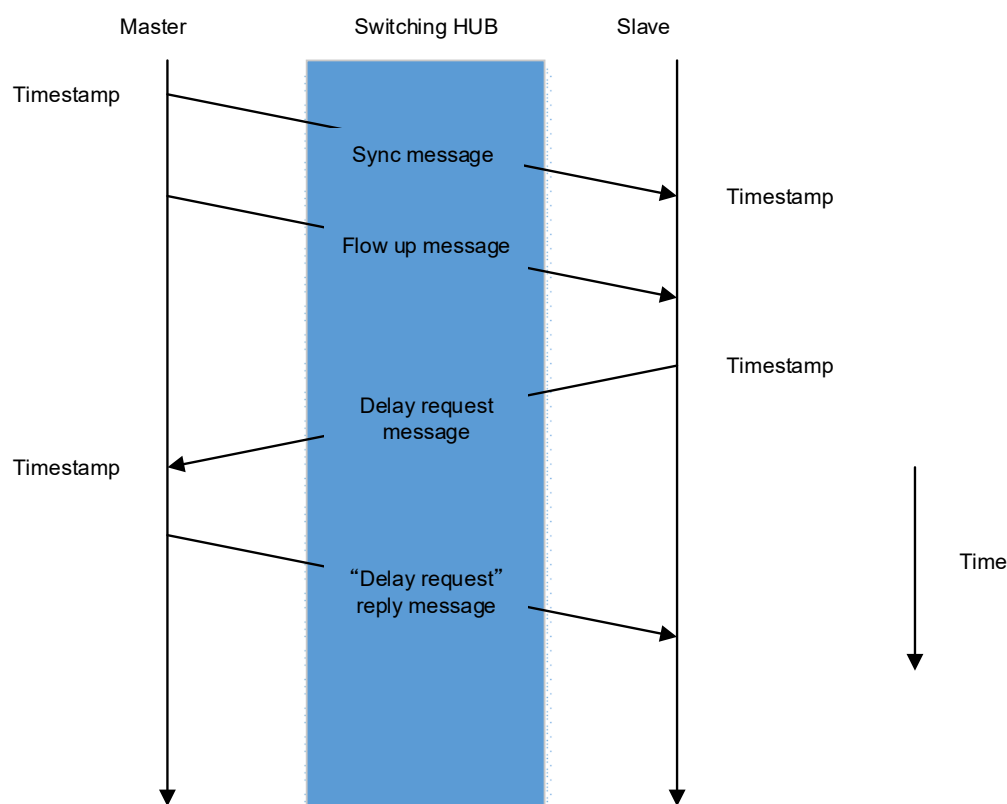

The master device and slave device exchange message included Timestamp.

Defined delay between master device and slave device by comparing these messages.

If time difference between master device and slave device is occurred, adjust internal clock of slave device to synchronize to master device.

Synchronize clock regularly to correcting time drift.

3) How to use PTP


Selects "True" at GeVIEEE1588 then synchronize camera time to "Master Clock" (synchronize time is different depending on system). The camera is ready for action command after synchronize to "Master Clock".

4) Synchronized exposure for trigger mode

When action command generating, action command is broadcasting to each camera and camera starts exposing.

Synchronized exposure does not secure if action command does NOT include Timestamp. If action command includes Timestamp, action command will be scheduled automatically and each camera start exposing at same time.

Action Control setting is required when action command generating.

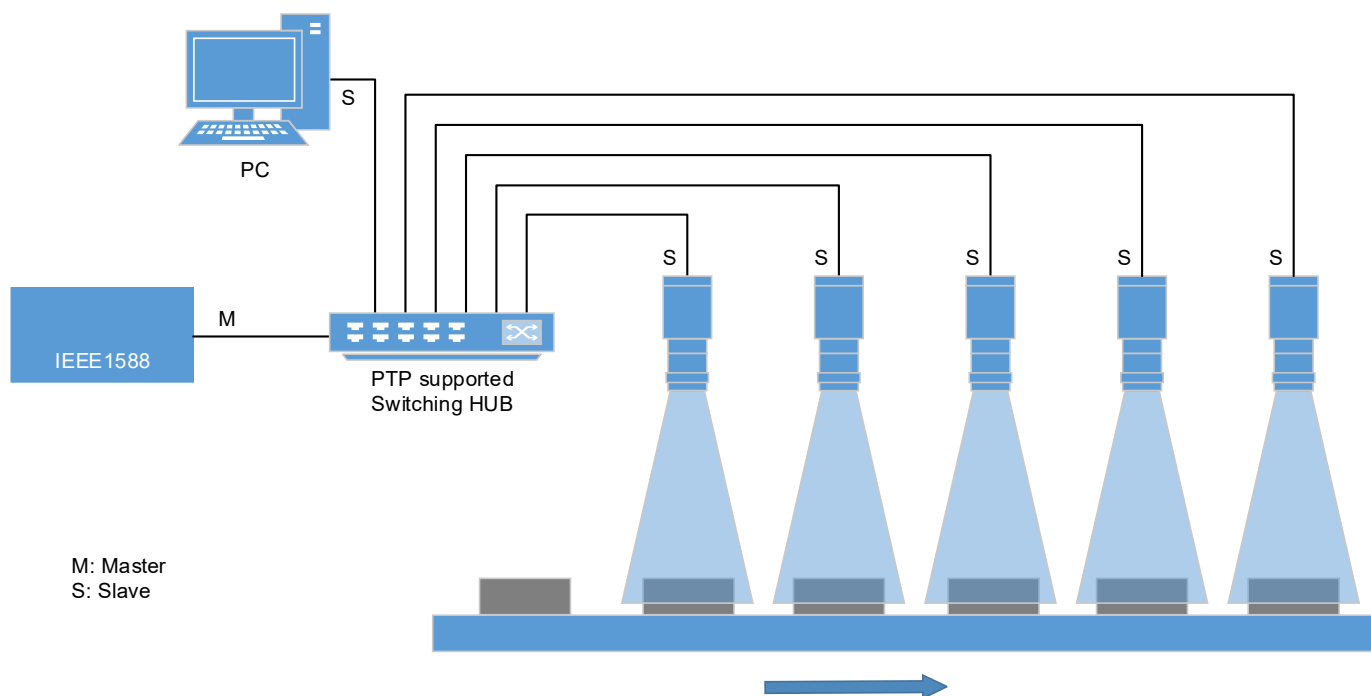

e.g. PTP configuration

11 GenICam command

11.1 DeviceControl

| Name | Description |
|----------------------------------|--|
| DeviceType | Returns the device type. |
| DeviceScanType | Scan type of the sensor of the device. |
| DeviceVendorName | Name of the manufacturer of the device. |
| DeviceModelName | Model of the device. |
| DeviceFamilyName | Identifier of the product family of the device. |
| DeviceManufacturerInfo | Manufacturer information about the device. |
| DeviceVersion | Version of the device. |
| DeviceHardwareVersion | Version of the hardware in the device. |
| DeviceFirmwareVersion | Version of the firmware in the device. |
| DeviceSerialNumber | Device's serial number. |
| DeviceUserID | User-programmable device identifier. |
| DeviceSFNCVersionMajor | Major version of the Standard Features Naming Convention that was used to create the device's GenICam XML. |
| DeviceSFNCVersionMinor | Minor version of the Standard Features Naming Convention that was used to create the device's GenICam XML. |
| DeviceSFNCVersionSubMinor | Sub minor version of Standard Features Naming Convention that was used to create the device's GenICam XML. |
| DeviceManifestEntrySelector | Selects the manifest entry to reference. |
| DeviceManifestXMLMajorVersion | Indicates the major version number of the GenICam XML file of the selected manifest entry. |
| DeviceManifestXMLMinorVersion | Indicates the minor version number of the GenICam XML file of the selected manifest entry. |
| DeviceManifestXMLSubMinorVersion | Indicates the sub minor version number of the GenICam XML file of the selected manifest entry. |
| DeviceManifestSchemaMajorVersion | Indicates the major version number of the schema file of the selected manifest entry. |
| DeviceManifestSchemaMinorVersion | Indicates the minor version number of the schema file of the selected manifest entry. |
| DeviceTLType | Transport Layer type of the device. |
| DeviceTLVersionMajor | Major version of the Transport Layer of the device. |
| DeviceTLVersionMinor | Minor version of the Transport Layer of the device. |
| DeviceTLVersionSubMinor | Sub minor version of the Transport Layer of the device. |
| DeviceMaxThroughput | Maximum bandwidth of the data that can be streamed out of the device. |
| DeviceLinkSelector | Selects which Link of the device to control. |

| Name | Description |
|--|---|
| DeviceLinkSpeed [DeviceLinkSelector] | Indicates the speed of transmission negotiated on the specified Link. |
| DeviceLinkHeartbeatTimeout [DeviceLinkSelector] | Controls the current heartbeat timeout of the specific Link. |
| DeviceLinkCommandTimeout [DeviceLinkSelector] | Indicates the command timeout of the specified Link. |
| DeviceStreamChannelCount | Indicates the number of streaming channels supported by the device. |
| DeviceStreamChannelSelector | Selects the stream channel to control. |
| DeviceStreamChannelType [DeviceStreamChannelSelector] | Reports the type of the stream channel. |
| DeviceStreamChannelEndianness [DeviceStreamChannelSelector] | Endianness of multi-byte pixel data for this stream. |
| DeviceEventChannelCount | Indicates the number of event channels supported by the device. |
| DeviceCharacterSet | Character set used by the strings of the device's bootstrap registers. |
| DeviceReset | Resets the device to its power up state. |
| DeviceRegistersStreamingStart | Prepare the device for registers streaming without checking for consistency. |
| DeviceRegistersStreamingEnd | Announce the end of registers streaming. |
| DeviceRegistersEndianness | Endianness of the registers of the device. |
| DeviceTemperatureSelector | Selects the location within the device, where the temperature will be measured. |
| DeviceTemperature [DeviceTemperatureSelector] | Device temperature in degrees Celsius (C). |
| TimestampReset | Resets the current value of the device timestamp counter. |
| TimestampLatch | Latches the current timestamp counter into Timestamp Latch Value. |
| TimestampLatchValue | Returns the latched value of the timestamp counter. |
| DeviceUserMemory | Read / Write the user data from / to the non-volatile memory. |

11.2 ImageFormatControl

| Name | Description |
|---|---|
| SensorWidth | Effective width of the sensor in pixels. |
| SensorHeight | Effective height of the sensor in pixels. |
| SensorShutterMode | Sets the shutter mode of the device. |
| WidthMax | Maximum width of the image (in pixels). |
| HeightMax | Maximum height of the image (in pixels). |
| DecimationHorizontal | Horizontal sub-sampling of the image. |
| DecimationVertical | Vertical sub-sampling of the image. |
| RegionSelector | Selects the Region of interest to control. |
| RegionMode [RegionSelector] | Controls if the selected Region of interest is active and streaming. |
| Width [RegionSelector] | Width of the image provided by the device (in pixels). |
| Height [RegionSelector] | Height of the image provided by the device (in pixels). |
| OffsetX [RegionSelector] | Horizontal offset from the origin to the region of interest (in pixels). |
| OffsetY [RegionSelector] | Vertical offset from the origin to the region of interest (in pixels). |
| PixelFormat | Format of the pixels provided by the device. |
| PixelSize | Total size in bits of a pixel of the image. |
| PixelColorFilter | Type of color filter that is applied to the image. |
| ReverseX | Flip horizontally the image sent by the device. |
| ReverseY | Flip vertically the image sent by the device. |
| TestPatternGeneratorSelector | Selects which test pattern generator is controlled by the Test Pattern feature. |
| TestPattern [TestPatternGeneratorSelector] | Selects the type of test pattern that is generated by the device as image source. |
| TestPatternInputValue [TestPatternGeneratorSelector] | Test Pattern Input Value |

11.3 AcquisitionControl

| Name | Description |
|-------------------------------------|---|
| AcquisitionMode | Sets the acquisition mode of the device. |
| AcquisitionStart | Starts the Acquisition of the device. |
| AcquisitionStop | Stops the Acquisition of the device at the end of the current Frame. |
| AcquisitionFrameCount | Number of frames to acquire in Multi Frame Acquisition mode. |
| AcquisitionFrameRate | Controls the acquisition rate (in Hertz) at which the frames are captured. |
| TriggerSelector | Selects the type of trigger to configure. |
| TriggerMode [TriggerSelector] | Controls if the selected trigger is active. |
| TriggerSoftware [TriggerSelector] | Generates an internal trigger. |
| TriggerSource [TriggerSelector] | Specifies the internal signal or physical input Line to use as the trigger source. |
| TriggerActivation [TriggerSelector] | Specifies the activation mode of the trigger. |
| TriggerDelay [TriggerSelector] | Specifies the delay in microseconds (us) to apply after the trigger reception before activating it. |
| ExposureMode | Sets the operation mode of the Exposure. |
| ExposureTimeSelector | Selects which exposure time is controlled by the Exposure Time feature. |
| ExposureTime [ExposureTimeSelector] | Sets the Exposure time when Exposure Mode is Timed and Exposure Auto is Off. |
| ExposureAuto | Sets the automatic exposure mode when Exposure Mode is Timed. |
| ExposureAutoLimitMin | Determine the lower limit of exposure time when Exposure Auto is set to Continuous. |
| ExposureAutoLimitMax | Determine the upper limit of exposure time when Exposure Auto is set to Continuous. |

11.4 AnalogControl

| Name | Description |
|---|--|
| GainSelector | Selects which Gain is controlled by the various Gain features. |
| Gain [GainSelector] | Controls the selected gain as an absolute physical value. |
| GainAuto [GainSelector] | Sets the automatic gain control (AGC) mode. |
| GainAutoLimitMin [GainSelector] | Determine the lower limit of gain when Gain Auto is set to Continuous. |
| GainAutoLimitMax [GainSelector] | Determine the upper limit of gain when Gain Auto is set to Continuous. |
| AutoLuminanceTarget | Target brightness for auto luminance control. |
| AutoLuminanceRegionSelector | Select the area for auto luminance control. |
| AutoLuminanceWidth [AutoLuminanceRegionSelector] | Determine width of targeted region for auto luminance control. |
| AutoLuminanceHeight [AutoLuminanceRegionSelector] | Determine height of targeted region for auto luminance control. |
| AutoLuminanceOffsetX [AutoLuminanceRegionSelector] | Determine X offset of targeted region for auto luminance control. |
| AutoLuminanceOffsetY [AutoLuminanceRegionSelector] | Determine Y offset of targeted region for auto luminance control. |
| AutoLuminanceWeight [AutoLuminanceRegionSelector] | Weight of the area determined by Auto Luminance Region Selector for auto luminance control. |
| AutoLuminancePeak | Ratio of peak and average for auto luminance control. |
| BlackLevelSelector | Selects which Black Level is controlled by the various Black Level features. |
| BlackLevel [BlackLevelSelector] | Controls the analog black level as an absolute physical value. |
| DigitalGainOffsetMode | Digital Gain Offset Mode is enabled. |
| BalanceRatioSelector | Selects which Balance ratio to control. (STC-MCS312POE) |
| BalanceRatio [BalanceRatioSelector] | Controls ratio of the selected color component to a reference color component. (STC-MCS312POE) |
| BalanceWhiteAuto | Controls the mode for automatic white balancing between the color channels. (STC-MCS312POE) |
| BalanceWhiteAutoRegionSelector | Select the area for auto white balance. (STC-MCS312POE) |
| BalanceWhiteAutoWidth [BalanceWhiteAutoRegionSelector] | Determine width of targeted region for auto white balance. (STC-MCS312POE) |
| BalanceWhiteAutoHeight [BalanceWhiteAutoRegionSelector] | Determine height of targeted region for auto white balance. (STC-MCS312POE) |
| BalanceWhiteAutoOffsetX [BalanceWhiteAutoRegionSelector] | Determine X offset of targeted region for auto white balance. (STC-MCS312POE) |
| BalanceWhiteAutoOffsetY [BalanceWhiteAutoRegionSelector] | Determine Y offset of targeted region for auto white balance. (STC-MCS312POE) |
| Gamma | Controls the gamma correction of pixel intensity. |

11.5 LUTControl

| Name | Description |
|---|--|
| LUTSelector | Selects which LUT to control. |
| LUTEnable [LUTSelector] | Activates the selected LUT. |
| LUTIndex [LUTSelector] | Control the index (offset) of the coefficient to access in the selected LUT. |
| LUTValue [LUTSelector] [LUTIndex] | Returns the Value at entry LUT Index of the LUT selected by LUT Selector. |
| LUTValueAll [LUTSelector] | Accesses all the LUT coefficients in a single access without using individual LUT Index. |
| PixelCorrectionAllEnabled | Enable pixel correction for all pixels. |
| PixelCorrectionIndex | Determine index of targeted pixel for pixel correction. |
| PixelCorrectionEnabled [PixelCorrectionIndex] | Determine if targeted pixel is enabled for pixel correction. |
| PixelCorrectionX [PixelCorrectionIndex] | Determine x-coordinate of targeted pixel for pixel correction. |
| PixelCorrectionY [PixelCorrectionIndex] | Determine y-coordinate of targeted pixel for pixel correction. |

11.6 DigitalIOControl

| Name | Description |
|------------------------------------|--|
| LineSelector | Selects the physical line (or pin) of the external device connector or the virtual line of the Transport Layer to configure. |
| LineMode [LineSelector] | Controls if the physical Line is used to Input or Output a signal. |
| LineFormat [LineSelector] | Controls the current electrical format of the selected physical input or output Line. |
| LineSource [LineSelector] | Selects which internal acquisition or I/O source signal to output on the selected Line. |
| LineInverter [LineSelector] | Controls the inversion of the signal of the selected input or output Line. |
| LineDebounceTime [LineSelector] | Sets the value of the input line debouncer time. |
| LineStatus [LineSelector] | Returns the current status of the selected input or output Line. |
| LineStatusAll | Returns the current status of all available Line signals at time of polling in a single bitfield. |
| UseOutputSelector | Selects which bit of the User Output register will be set by User Output Value. |
| UseOutputValue [UseOutputSelector] | Sets the value of the bit selected by User Output Selector. |

11.7 LogicBlockControl

| Name | Description |
|---|---|
| LogicBlockSelector | Specifies the Logic Block to configure. |
| LogicBlockFunction [LogicBlockSelector] | Selects the combinational logic Function of the Logic Block to configure. |
| LogicBlockInputNumber [LogicBlockSelector] | Specifies the number of active signal inputs of the Logic Block. |
| LogicBlockInputSelector [LogicBlockSelector] | Selects the Logic Block's input to configure. |
| LogicBlockInputSource [LogicBlockSelector] [LogicBlockInputSelector] | Selects the source signal for the input into the Logic Block. |
| LogicBlockInputInverter [LogicBlockSelector] [LogicBlockInputSelector] | Selects if the selected Logic Block Input source signal is inverted. |

11.8 SoftwareSignalControl

| Name | Description |
|--|--|
| SoftwareSignalSelector | Selects which Software Signal features to control. |
| SoftwareSignalPulse [SoftwareSignalSelector] | Generates a pulse signal that can be used as a software trigger. |

11.9 CounterAndTimerControl

| Name | Description |
|--|--|
| CounterSelector | Selects which Counter to configure. |
| CounterEventSource [CounterSelector] | Select the events that will be the source to increment the Counter. |
| CounterResetSource [CounterSelector] | Selects the signals that will be the source to reset the Counter. |
| CounterResetActivation [CounterSelector] | Selects the Activation mode of the Counter Reset Source signal. |
| CounterReset [CounterSelector] | Does a software reset of the selected Counter and starts it. |
| CounterValue [CounterSelector] | Reads or writes the current value of the selected Counter. |
| TimerSelector | Selects which Timer to configure. |
| TimerDuration [TimerSelector] | Sets the duration (in microseconds) of the Timer pulse. |
| TimerDelay [TimerSelector] | Sets the duration (in microseconds) of the delay to apply at the reception of a trigger before starting the Timer. |
| TimerTriggerSource [TimerSelector] | Selects the source of the trigger to start the Timer. |
| TimerTriggerActivation [TimerSelector] | Selects the activation mode of the trigger to start the Timer. |
| TimerValue [TimerSelector] | Reads or writes the current value (in microseconds) of the selected Timer. |

11.10 EventControl

| Name | Description |
|-----------------------------------|---|
| EventSelector | Selects which Event to signal to the host application. |
| EventNotification [EventSelector] | Activate or deactivate the notification to the host application of the occurrence of the selected Event. |
| EventTestData | Category that contains all the data features related to the Event Test generated using the Test Event Generate command. |
| EventExposureStartData | Category that contains all the data features related to the Exposure Start Event. |
| EventExposureEndData | Category that contains all the data features related to the Exposure End Event. |
| EventFrameTriggerData | Category that contains all the data features related to the Frame Trigger Event. |
| EventFrameStartData | Category that contains all the data features related to the Frame Start Event. |
| EventFrameEndData | Category that contains all the data features related to the Frame End Event. |
| EventLine0RisingEdgeData | Category that contains all the data features related to the Line0 Rising Edge Event. |
| EventLine0FallingEdgeData | Category that contains all the data features related to the Line0 Falling Edge Event. |
| EventLine2RisingEdgeData | Category that contains all the data features related to the Line2 Rising Edge Event. |
| EventLine2FallingEdgeData | Category that contains all the data features related to the Line2 Falling Edge Event. |
| EventBlockDiscardData | Category that contains all the data features related to the Block Discard Event. |
| EventActionLateData | Category that contains all the data features related to the Action Late Event. |

11.11 UserSetControl

| Name | Description |
|-------------------------------|--|
| UserSetSelector | Selects the feature User Set to load, save or configure. |
| UserSetLoad [UserSetSelector] | Loads the User Set specified by User Set Selector to the device and makes it active. |
| UserSetSave [UserSetSelector] | Save the User Set specified by User Set Selector to the non-volatile memory of the device. |
| UserSetDefault | Selects the feature User Set to load and make active by default when the device is reset. |

11.12 ChunkDataControl

| Name | Description |
|---|--|
| ChunkModeActive | Activates the inclusion of Chunk data in the payload of the image. |
| ChunkSelector | Selects which Chunk to enable or control. |
| ChunkEnable [ChunkSelector] | Enables the inclusion of the selected Chunk data in the payload of the image. |
| ChunkCounterSelector | Selects which counter to retrieve data from. |
| ChunkCounterValue [ChunkCounterSelector] | Returns the value of the selected Chunk counter. |
| ChunkGainSelector | Selects which Gain to return. |
| ChunkGain [ChunkGainSelector] | Returns the gain used to capture the image. |
| ChunkBlackLevelSelector | Selects which Black Level to return. |
| ChunkBlackLevel [ChunkBlackLevelSelector] | Returns the black level used to capture the image included in the payload. |
| ChunkExposureTimeSelector | Selects which Exposure Time to return. |
| ChunkExposureTime [ChunExposureTimeSelector] | Returns the exposure time used to capture the image. |
| ChunkLineStatusAll | Returns the status of all the I/O lines at the time of the Frame Start internal event. |
| ChunkTimerSelector | Selects which timer to retrieve data from. |
| ChunkTimerValue [ChunkTimerSelector] | Returns the value of the selected Timer. |
| ChunkDeviceTemperature | Indicates the value of the temperature when the image was acquired. |

11.13 ActionControl

| Name | Description |
|----------------------------------|--|
| ActionDeviceKey | Provides the device key that allows the device to check the validity of action commands. |
| ActionQueueSize | Indicates the size of the scheduled action commands queue. |
| ActionSelector | Selects to which Action Signal further Action settings apply. |
| ActionGroupMask [ActionSelector] | Provides the mask that the device will use to validate the action on reception of the action protocol message. |
| ActionGroupKey [ActionSelector] | Provides the key that the device will use to validate the action on reception of the action protocol message. |

11.14 FileAccessControl

| Name | Description |
|--|--|
| FileSelector | Selects the target file in the device. |
| FileOperationSelector [FileSelector] | Selects the target operation for the selected file in the device. |
| FileOperationExecute [FileSelector] [FileOperationSelector] | Executes the operation selected by File Operation Selector on the selected file. |
| FileOpenMode [FileSelector] | Selects the access mode in which a file is opened in the device. |
| FileAccessBuffer | Defines the intermediate access buffer that allows the exchange of data between the device file storage and the application. |
| FileAccessOffset [FileSelector] [FileOperationSelector] | Controls the Offset of the mapping between the device file storage and the File Access Buffer. |
| FileAccessLength [FileSelector] [FileOperationSelector] | Controls the Length of the mapping between the device file storage and the File Access Buffer |
| FileOperationStatus [FileSelector] [FileOperationSelector] | Represents the file operation execution status. |
| FileOperationResult [FileSelector] [FileOperationSelector] | Represents the file operation result. |
| FileSize [FileSelector] | Represents the size of the selected file in bytes. |

11.15 TestControl

| Name | Description |
|-------------------|---|
| TestPendingAck | Tests the device's pending acknowledge feature. |
| TestEventGenerate | Generates a Test Event. |

11.16 TransportLayerControl

| Name | Description |
|---|--|
| PayloadSize | Provides the number of bytes transferred for each image or chunk on the stream channel. |
| PtpEnable | Enable the Precision Time Protocol (PTP). |
| PtpClockAccuracy | Indicate the expected accuracy of the device PTP clock when it is the grandmaster, or in the event it becomes the grandmaster. |
| PtpDataSetLatch | Latches the current values from the device's PTP clock data set. |
| PtpStatus | Returns the latched state of the PTP clock. |
| PtpOffsetFromMaster | The latched offset from the PTP master clock in nanoseconds. |
| PtpClockID | The latched clock ID of the PTP device. PTP Parent Clock ID. |
| PtpParentClockID | The latched parent clock ID of the PTP device. The parent clock ID is the clock ID of the current master clock. |
| PtpGrandmasterClockID | The latched grandmaster clock ID of the PTP device. The grandmaster clock ID is the clock ID of the current grandmaster clock. |
| GevSupportedOptionSelector | Selects the GEV option to interrogate for existing support. |
| GevSupportedOption [GevSupportedOptionSelector] | Returns if the selected GEV option is supported. |
| GevInterfaceSelector | Selects which logical link to control. |
| GevMACAddress [GevInterfaceSelector] | MAC address of the logical link. |
| GevCurrentIPConfigurationLLA [GevInterfaceSelector] | Controls whether the Link Local Address IP configuration scheme is activated on the given logical link. |
| GevCurrentIPConfigurationDHCP [GevInterfaceSelector] | Controls whether the DHCP IP configuration scheme is activated on the given logical link. |
| GevCurrentIPConfigurationPersistentIP [GevInterfaceSelector] | Controls whether the Persistent IP configuration scheme is activated on the given logical link. |
| GevCurrentIPAddress [GevInterfaceSelector] | Reports the IP address for the given logical link. |
| GevCurrentSubnetMask [GevInterfaceSelector] | Reports the subnet mask of the given logical link. |
| GevCurrentDefaultGateway [GevInterfaceSelector] | Reports the default gateway IP address to be used on the given logical link. |
| GevIPConfigurationStatus [GevInterfaceSelector] | Reports the current IP configuration status. |
| GevPersistentIPAddress [GevInterfaceSelector] | Controls the Persistent IP address for this logical link. |
| GevPersistentSubnetMask [GevInterfaceSelector] | Controls the Persistent subnet mask associated with the Persistent IP address on this logical link. |
| GevPersistentDefaultGateway [GevInterfaceSelector] | Controls the persistent default gateway for this logical link. |
| GevGVCPExtendedStatusCodesSelector | Selects the GigE Vision version to control extended status codes for. |

| Name | Description |
|--|--|
| GevGVCPExtendedStatusCodes [GevGVCPExtendedStatusCodesSelector] | Enables the generation of extended status codes. |
| GevGVCPPendingAck | Enables the generation of PENDING_ACK. |
| GevPrimaryApplicationSwitchoverKey | Controls the key to use to authenticate primary application switchover requests. |
| GevGVCPExpendIDMode | Enables the extended IDs mode. |
| GevCCP | Controls the device access privilege of an application. |
| GevPrimaryApplicationSocket | Returns the UDP source port of the primary application. |
| GevPrimaryApplicationIPAddress | Returns the address of the primary application. |
| GevMCPHostPort | Controls the port to which the device must send messages. |
| GevMCDA | Controls the destination IP address for the message channel. |
| GevMCTT | Provides the transmission timeout value in milliseconds. |
| GevMCRC | Controls the number of retransmissions allowed when a message channel message times out. |
| GevMCSP | This feature indicates the source port for the message channel. |
| GevStreamChannelSelector | Selects the stream channel to control. |
| GevSCPIInterfaceIndex [GevStreamChannelSelector] | Index of the logical link to use. |
| GevSCPHostPort [GevStreamChannelSelector] | Controls the port of the selected channel to which a GVSP transmitter must send data stream or the port from which a GVSP receiver may receive data stream. |
| GevSCPSFireTestPacket [GevStreamChannelSelector] | Sends a test packet. |
| GevSCPSDoNotFragment [GevStreamChannelSelector] | The state of this feature is copied into the "do not fragment" bit of IP header of each stream packet. |
| GevSCPSPacketSize [GevStreamChannelSelector] | This GigE Vision specific feature corresponds to DeviceStreamChannelPacketSize and should be kept in sync with it. |
| GevSCFTD [GevStreamChannelSelector] | Controls the delay (in GEV timestamp counter unit) to insert between each packet for this stream channel. |
| GevSCPD [GevStreamChannelSelector] | Controls the delay (in GEV timestamp counter unit) to insert between each frame for this stream channel. |
| GevSCDA [GevStreamChannelSelector] | Controls the destination IP address of the selected stream channel to which a GVSP transmitter must send data stream or the destination IP address from which a GVSP receiver may receive data stream. |
| GevSCSP [GevStreamChannelSelector] | Indicates the source port of the stream channel. |

12 Revision History

| Rev | Date | Changes | Note |
|-----|------------|--|------|
| 00 | 2019/03/25 | ● New Document | |
| 01 | 2019/05/13 | ● Revised Revised Optical Center Accuracy | |
| 02 | 2019/05/30 | ● Revised Revised type of GenICam parameters | |
| 03 | 2019/06/07 | ● Revised Added "LWIP TCP/IP Licensing" information | |

Note: Product specifications would be changed without notification.

GigE Vision is trademark of AIA.

GenICam is trademark of EMVA.

Other company names and product names in this document are trademarks of their respective owners.

OMRON SENTECH CO., LTD.

19F, Ebina Prime Tower
9-50, Chuo 2 chome
Ebina-city, Kanagawa
243-0432 Japan
TEL 81-46-236-6660 FAX 81-46-236-6661
URL <http://www.sentech.co.jp/>