OMRON SYSMAC CPシリーズ CP2E CPUユニット

安全上のご注意

このたびは当社のプログラマブルコントローラ(PLC)をお買い求め いただきまして誠にありがとうございました。 安全にご使用いただくために、本紙とPLC本体のマニュアルおよび 当該ユニットの参照マニュアルを必ずお読みください。 参照マニュアルは、当社の最寄りの営業所に連絡し、最新のものをご 使用ください。 また本紙と参照マニュアルは、大切に保管していただくとともに、最 終ユーザ様までお届けくださいますようお願いいたします。

オムロン株式会社

© OMRON Corporation 2019 All Rights Reserved. 2868776-6A

安全上のご注意

警告/注意表示の意味

正しい取扱いをしなければ、この危険のために、軽症・中程 度の傷害を負ったり、万一の場合には重症や死亡に至る恐れ <u> へ 警告</u> があります。また、同様に重大な物的損害をもたらす恐れが あります。 正しい取扱いをしなければ、この危険のために、時に軽症・ 中程度の傷害を負ったり、あるいは物的損害を受ける恐れが

介 注意 あります。

● 警告表示





注意	
サイクルタイムが延びても影響がないことを確認してから、オンライ ンエディットをしてください。 入力信号を読み取れないことがあります。	<u>/</u> !
プログラムを転送するときや、1/0メモリを変更する操作をするとき は、変更先の安全を確認してから行ってください。けがをする恐れが	<u>/</u> !



安全上の要点

- ●PLC本体の開封時に外観チェックを行い、損傷のないことを確認してください。
- また、製品を軽く振って、異音がないことを確認してください。
- ●外部配線の短絡に備えて、ブレーカを設置するなど安全対策を施してください。 ●端子台、コネクタは十分確認してから装着してください。
- ●PLCの端子台のねじ、ケーブルのねじは、参照マニュアルで指定した規定トルクで締
- めてください。形CP1W-CIF11/CIF12-V1の端子台ねじは0.23N・m (2Lb In.) で締め付 けてください。
- ●参照マニュアルに示すとおり、正しく配線してください。
- ●参照マニュアルで指定した電源電圧で使用してください。
- ●入力端子には、定格入力電圧を超える電圧を印加しないでください
- ●電源事情が悪い場所では特に、定格の電圧や周波数の電源が供給できるようにしてご 使用ください。
- ●配線は圧着端子を付けてください。撚り合わせただけの電線を、直接端子台に接続し ないでください。
- ●出力端子には、最大開閉能力を超える電圧の印加および負荷の接続をしないでくださ
- ●据え付け工事の際には、必ずD種接地(第3種接地)をしてください。
- ●端子台、コネクタ、オプションボードなどロック機構のあるものは、必ずロックして いることを確認してからご使用ください。
- ●耐電圧試験は、機能接地端子を外して行ってください。
- ●配線、スイッチなどの設定を十分確認してから通電してください。
- ●運転を開始する前に、ディップスイッチやデータメモリが正しく設定されていること
- を確認してください。 ●作成したユーザプログラムは、十分な動作確認を行った後、本運転に移行してくださ L.).
- ●運転再開に必要なデータメモリや保持リレーの内容、プログラム、パラメータおよび データは、交換したCPUユニットに転送してから運転を再開してください。
- ●不適切なパラメータが設定されていると、設備が予期しない動作をする恐れがありま す。また、適切なパラメータが設定されている場合でも、設備に影響がないことを確 認してから転送を実行してください。
- ●ユーザプログラム、パラメータエリアのデータを内蔵フラッシュメモリにバックアッ プされます。バックアップ中はCPUユニット前面のBKUP LEDが点灯します。点灯中は PLC本体の電源を切らないでください。万一きったときは、データはバックアップさ れず、次回電源ON時にデータメモリに転送されません。
- ●時刻データをプログラムに使用している場合は、別売りのバッテリを装着してくださ い。バッテリを装着しないと電源OFF時に時刻データが初期化され、プログラムが誤 動作する可能性があります。
- ●バッテリを使用する場合は、PLCシステム設定の「バッテリ異常を検出する」に設定 してください。工場出荷時は「検出しない」に設定されています。設定を変更しない 場合、バッテリ消耗時に異常を検出せず、時刻データを用いたプログラムが誤動作す る可能性があります。
- ●本製品を分解して修理や改造をしないでください。
- ●次のことを行うときは、PLC本体の電源をOFFにしてください。 ・拡張ユニットをCPUユニットから着脱するとき
- ・ケーブルを接続、配線するとき
- ・コネクタを取り付けたり、取り外したりするとき
- オプションボードを着脱するとき
- ・ディップスイッチやロータリースイッチを設定するとき
- ●次の操作は設備に影響がないかを確認したうえで行ってください。 PLCの動作モード切り替え(雷源投入時の動作モード設定を含む) ・接点の強制セット/リセット
- ・現在値や設定値の変更
- ●ケーブルを無理に曲げたり引っ張ったりしないでください。
- ●ケーブルやコードにものを載せないでください。
- ●部品の交換は、必ず定格が正しいことを確認した上で行ってください。 ●接地された金属に触れるなどして、人体の静電気を放電させてからユニットに触れて
- ください。 ●静電気による誤動作防止のため、通電中は拡張1/0接続ケーブルに触れないでくださ
- 1.1. ●データの転送中はユニットの電源を0FFにしないでください。
- ●運搬や保存時は、LSI、ICなど、静電気による破壊防止のため、ユニットや回路基板 を導電性のもので覆うか、帯電防止袋に入れ、保存温度範囲に保ってください。 ●回路基板には電気部品のリードなど鋭利な部分がありますので、部品実装部や基板の
- 裏面に直接手を触れないでください。 ●コネクタの組み立て、配線はピン番号を十分確認してから行ってください。
- ●配線は参照マニュアルで指示された方法で行ってください。
- ●接続ケーブルは各ユニットのマニュアルに記載されている専用ケーブルを使用してく ださい。市販の一般パソコン用RS-232Cケーブルを使用すると、外部機器およびCPU ユニットが故障する恐れがあります。
- ●CPUユニットに装着したRS-232Cオプションボード(形CP1W-CIF01)の6番ピン (+5V電源) は、プログラマブルターミナルNVシリーズ形NV3W-MG20L/MR20L(-V1)以外

の外部機器には接続しないでください。外部機器およびCPUユニットが故障する恐れ があります。

- ●無通電で電池無しの状態で放置し、バッテリ装着後、一度も電源投入しない状態で放 置すると、バッテリの寿命が短くなることがあります。
- ●バッテリの交換作業は、CPU ユニットの精密部品の静電気による損傷、誤動作を避け るため、無通電状態での実施を推奨いたします。電源をOFF にせず通電中にバッテリ を交換することは可能ですが、その場合は、必ず接地された金属に触るなどして、人 体の静電気を放電させてから交換作業に入ってください
- ●時刻データの内容が破壊される可能性があるため、電池の交換前には30分以上通電し 電源OFF後5分以内に新しい電池と交換してください。
- ●入出力端子に接続する配線材は、必ず以下のものを使用してください。AWG22-18 $(0.32 \sim 0.82 \text{ mm}^2)$
- ●本体および不要になった電池の **摩華については、地方自治体により**
- 規制を受ける場合があります。 それぞれの自治体規制に従って廃棄してください。
- ●lithium-次電池(過塩素酸塩含有量が6ppb以上)を組み込んだ製品が米国-California 州へ輸出・経由される場合、次の表示が義務化されています。 Perchlorate Material - special handling may apply. See http://www.dtsc.ca.gov/hazardouswaste/perchlorate

廢雷池請回收

- 形CP2E-N/Sロロローロはlithium一次電池(過塩素酸塩含有量が6ppb以上)形CP2W-BAT02 を装着することができます。形CP2E -N/Sロロロローロに形CP2W-BAT02が組み込まれた 貴社製品を米国-California 州へ輸出される場合は、貴社製品の梱包箱、輸送箱など に上記表示を行っていただくようお願いします。
- ●この商品はPLCシステムに組み込まれた状態で、EMC指令に適合しています。EMC指令 に適合するための、接地-ケーブル選定・その他の条件については、該当するマニュア ルを参照ください。
- ●この商品は「class A」(工業環境商品)です。住宅環境でご利用されると 雷波妨害 の原因となる可能性があります。その場合には電波妨害に対する適切な対策が必要と なります。
- ●バッテリは液漏れ、破裂、発熱、発火などの恐れがありますので、+、-の短絡、充 電、分解、加熱、火への投入、強い衝撃を与えることなどは絶対に行わないでくださ い。また、床に落下させるなどして強い衝撃を与えた電池は、液漏れする恐れがあり ますので絶対に使用しないでください。
- ●電池の交換は熟練した技術者によって行われることが、UL 規格で定められています。 交換作業は熟練した技術者がご担当ください。また、本マニュアルに記載した方法で 交換してください。
- ●製品を落下させたり、異常な振動・衝撃を与えないでください。製品の故障、焼損の 可能性があります。

オプション製品の取扱い

い下の冬季ナプショ	、制日(十	CD2Eに壮美して使用します	
レルトの合性オ ノンヨ		いてに、デ酒して作用します。	

オプション製品		適用 PLC			
	CP2E E/S	タイプ	CP2E Nタイプ		
	CPUユニッ	CPU ユニット 形 CP2 E- E/S□□-□		CPU ユニット 形 CP2E-N□□□-□	
	形 CP2 E- E				
	E10 🗆	E/S30 🗆 🗆	N14□□	N30 🗆 🗆	
	E14□□	E/S40 🗆 🗆	N20 🗆 🗆	N40 🗆 🗆	
	E20 🗆 🗆	E/S60 🗆 🗆		N60 🗆 🗆	
RS-232C オプションボード	装着不可	装着不可	使用可	使用可	
形 CP1W-CIF01					
RS-422A/485					
オプションボード					
形 CP1W-CIF11/CIF12-V1					
シリアル通信			使用可	使用可	
オプションボード					
形 CP2W-CIFD1/CIFD2/CIFD3					
アナログオプションボード形			使用可	使用可	
CP1W-MAB221/ADB21/DAB21V					
LCD オプションボード			装着不可	装着不可	
形 CP1W-DAM01					
イーサネットオプションボード形			装着不可	装着不可	
CP1W-CIF41				1	
メモリカセット	7		装着不可	装着不可	
形 CP1W-ME05M					
I/O 接続ケーブル		使用可	装着不可	使用可	
形 CP1W-CN811			1	1	

使用上の注意

- ●参照マニュアルに示すとおり、正しく設置してください。 ●ユニット内に配線クズや切粉などの異物が入らないようにしてください。焼損、故障、
- 誤動作の原因となります。特に施工時は養生を行うなど対策を行ってください。
- ●次のような環境には設置しないでください。 日光が直接当たる場所
- ・周囲温度や相対湿度が仕様値の範囲を超える場所
- ・温度の変化が急激で結露するような場所
- ・ 庶食性ガス 可燃性ガスのある場所
- ・ちり、ほこり、塩分、鉄粉が多い場所 ・水、油、薬品などの飛沫がかかる場所
- 本体に直接振動や衝撃が伝わる場所
- ・屋外で風雨が直接当たる場所

・紫外線の強い場

●次のような場所で使用する際は、遮蔽対策を十分に行ってください。 ・静電気などによるノイズが発生する場所 ・強い電界や磁界が生じる場所
 ・
 放射能を被曝する恐れのある場所
電源線や動力線が近くを通る場所

参照マニュアル

形式/	Man. No.	
SYSMAC CP シリーズ	ユーザーズマニュアル	SBCA 477
CP2E CPU ユニット	ハードウェア編	30CA-4/7
SYSMAC CP シリーズ	ユーザーズマニュアル	CDCA 470
CP2E CPU ユニット	ソフトウェア編	5BCA-4/6
SYSMAC CP シリーズ		
CP1E/CP2E CPU ユニット		5BCA-350
CS/CJ/CP/NSJ シリーズ	通信コマンドリファレンスマニュアル	SBCA-304

ご承諾事項

当社商品は、一般工業製品向けの汎用品として設計製造されています。従い まして、次に掲げる用途での使用を意図しておらず、お客様が当社商品をこ れらの用途に使用される際には、当社は当社商品に対して一切保証をいたし ません。ただし、次に掲げる用途であっても当社の意図した特別な商品用途 の場合や特別の合意がある場合は除きます。

- 高い安全性が必要とされる用途(例:原子力制御設備、燃焼設備、航空・宇宙設備、鉄道設備、昇降設備、娯楽設備、医用機器、安全装置、 (a) その他生命・身体に危険が及びうる用途)
- (b) 高い信頼性が必要な用途(例:ガス・水道・雷気等の供給システム。 24 時間連続運転システム、決済システムほか権利・財産を取扱う用途 など)
- (c) 厳しい条件または環境での用途(例:屋外に設置する設備、化学的汚 染を被る設備、電磁的妨害を被る設備、振動・衝撃を受ける設備など) (b) カタログ等に記載のない条件や環境での用途
- * (a)から(d) に記載されている他、本カタログ等記載の商品は自動車(二輪 車含む。以下同じ)向けではありません。自動車に搭載する用途には利用 しないで下さい。自動車搭載用商品については当社営業担当者にご相談く ださい。
- * 上記は適合用途の条件の一部です。当社のベスト、総合カタログ、データシ ート等最新版のカタログ、マニュアルに記載の保証・免責事項の内容をよく 読んでご使用ください。

オムロン株式会社

インダストリアルオートメーションビジネスカンパニー

- ●製品に関するお問い合わせ先 お客様相談室 **Image 0120-919-066** 携帯電話・PHS・IP電話などではご利用いただけませんので、下記の電話番号へおかけください。 電話 055-982-5015(通話料がかかります) ■営業時間:8:00~21:00 ■営業日:365日 ●FAXやWebページでもお問い合わせいただけます。 FAX 055-982-5051 / www.fa.omron.co.jp ●その他のお問い合わせ
- 納期・価格・サンプル・仕様書は貴社のお取引先、または貴社 担当オムロン販売員にご相談ください。 オムロン制御機器販売店やオムロン販売拠点は、Webページで ご案内しています。
- お断りなく仕様などを変更することがありますのでご了承ください。

SYSMAC CP-series Programmable Controllers CP2E CPU Unit **Safety Precautions**

OMRON Corporation

©OMRON Corporation 2019 All Rights Reserved

Thank you for purchasing an OMRON Programmable Controller (PLC). To ensure safe operation, please be sure to read the safety precautions provided in this document along with all of the user manuals for the Programmable Controller. Please be sure you are using the most recent versions of the user manuals. Contact your nearest OMRON representative to obtain manuals. Keep these safety precautions and all user manuals in a safe location and be sure that they are readily available to the final user of the products.

▲ Caution

General Precautions

escribed in the operation manuals. efore using the product under conditions which are not described in the manual rapplying the product to nuclear control systems, railroad systems, aviation stems, vehicles, combustion systems, medical equipment, amusement ma- nines, safet vequipment, petrochemical plants, and other systems, machines, and	Δ	Ca
uppment that may have a serious influence on lives and property if used improperty, onsult your OMRON representative. ake sure that the ratings and performance characteristics of the product are ufficient for the systems, machines, and equipment, and be sure to provide the stems, machines, and equipment with double safety mechanisms.	⚠	Ca
Safety Precautions		

DANGER Indicates an imminently hazardous situation, which, if not avoided, will result in death or serious injury.

The user must operate the product according to the performance specifications

- MARNING Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious injury.
- Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate injury, or property damage.

Warnings and Cautions

- MARNING Do not attempt to take any Unit apart while the power is being supplied. Doing so may result in electric shock.
- MARNING Do not touch any of the terminals or terminal blocks while the power is being supplied. Doing so may result in electric shock.
- MARNING Do not attempt to disassemble, repair, or modify any Units. Any attempt to do so may result in malfunction, fire, or electric shock
- MARNING Provide safety measures in external circuits, i.e., not in the Programmable Controller (CPU Unit including associated Units; referred to as "PLC"), in order to ensure safety in the system if an abnormality occurs due to malfunction of the PLC or another external factor affecting the PLC operation. Not doing so may result in serious accidents.
- · Emergency stop circuits, interlock circuits, limit circuits, and similar safety measures must be provided in external control circuits.
- . The PLC will turn OFF all outputs when its self-diagnosis function detects any error or when a severe failure alarm (FALS) instruction is executed. Unexpected operation, however, may still occur for errors in the I/O control section, errors in I/O memory. and other errors that cannot be detected by the self-diagnosis function. As a countermeasure for such all errors, external safety measures must be provided to ensure safety in the system
- . The PLC outputs may remain ON or OFF due to deposition or burning of the output relays or destruction of the output transistors. As a countermeasure for such problems, external safety measures must be provided to ensure safety in the system

· When the 24-VDC output (service power supply to the PLC) is overloaded or short-circuited, the voltage may drop and result in the outputs being turned OFF. As a countermeasure for such problems, external safety measures must be provided to ensure safety in the system

- MARNING Fail-safe measures must be taken by the customer to ensure safety in the event of incorrect, missing, or abnormal signals caused by broken signal lines, momentary power interruptions, or other causes. Not doing so may result in serious accidents.
- MARNING Do not apply the voltage or current outside the specified range to this unit. It may cause a malfunction or fire
- Pay careful attention to the polarities (+/-) when ▲ Caution wiring the DC power supply. A wrong connection may cause malfunction of the system.
- Caution Execute online edit only after confirming that no adverse effects will be caused by extending the cycle time. Otherwise, the input signals may not be readable.
- Confirm safety at the destination node before trans-▲ Caution ferring a program to another node or editing the I/O area. Doing either of these without confirming safety may result in injury.

Tighten the screws on the terminal block of the AC Power Supply Unit to the torque specified in the operation manual. The loose screws may result in burning or malfunction.

OMRON

2868776-6A

- Do not touch anywhere near the power supply parts ution or I/O terminals while the power is ON, and immediately after turning OFF the power. The hot surface may cause burn injury
- When connecting the PLC to a computer or other ution peripheral device, either ground the 0-V side of the external power supply or do not ground the external power supply at all. The external power supply may be shorted depending on the connection methods of the peripheral device.

Operating Environment Precautions

▲ Caution Do not operate the control system in the following places:

· Locations subject to direct sunlight

· Locations subject to temperatures or humidity outside the range specified in the specifications · Locations subject to condensation as the result of severe changes in temperature

· Locations subject to corrosive or flammable gases

· Locations subject to dust (especially iron dust) or salts

· Locations subject to exposure to water, oil, or chemicals

· Locations subject to shock or vibration · Locations subject to direct rain fall

· Locations subject to direct strong UV

Take appropriate and sufficient countermeasures ▲ Caution when installing systems in the following locations:

· Locations subject to static electricity or other forms of noise Locations subject to strong electromagnetic fields Locations subject to possible exposure to radioactivity

Locations close to power supplies

▲ Caution The operating environment of the PLC System can have a large effect on the longevity and reliability of the system. Improper operating environments can lead to malfunction, failure, and other unforeseeable problems with the PLC System. Be sure that the operating environment is within the specified conditions at installation and remains within the specified conditions during the life of the system.

Application Precautions

Always heed these precautions. Failure to abide by the following precautions could lead to serious or

possibly fatal injury. • Always connect to 100 Ω or less when installing the Units. Not connecting to a ground of 100 Ω or less may result in electric shock.

- · Always turn OFF the power supply to the PLC before attempting any of the following. Not turning OFF the power supply may result in malfunction or electric shock. . Mounting or dismounting Expansion Units or any other Units
- · Connecting or removing the Option Board
- · Setting DIP switches or rotary switches
- · Connecting or wiring the cables
- · Connecting or disconnecting the connectors
- ∧ Caution Failure to abide by the following precautions could lead to faulty operation of the PLC or the system, or could damage the PLC or PLC Units. Always heed these precautions

 When unpacking the Unit, check carefully for any external scratches or other damages. Also, shake the Unit gently and check for any abnormal sound.

- . Set the Unit properly as specified in the operation manual. Improper setting of the Unit may result in malfunction. Always use the power supply voltage specified in the operation manuals. An incorrect
- voltage may result in malfunction or burning. · Take appropriate measures to ensure that the specified power with the rated voltage
- and frequency is supplied. Be particularly careful in places where the power supply is unstable. An incorrect power supply may result in malfunction. • Install external breakers and take other safety measures against short-circuiting in

external wiring. Insufficient safety measures against short-circuiting may result in burning. . Do not apply voltages to the input terminals in excess of the rated input voltage.

Excess voltages may result in burning

. Do not apply voltages or connect loads to the output terminals in excess of the maximum switching capacity. Excess voltage or loads may result in burning. · Disconnect the functional ground terminal when performing withstand voltage tests. Not disconnecting the functional ground terminal may result in burning.

. Install the Unit properly as specified in the operation manual. Improper installation of the Unit may result in malfunction.

. Be sure that all the terminal screws and cable connector screws are tightened to the torque specified in the relevant manuals. Incorrect tightening torque may result in malfunction The applicable tightening torgue is 2 Lb In. (0.23 N·m) for CP1W-CIE11/CIE12-V1.

. Use crimp terminals for wiring. Do not connect bare stranded wires directly to terminals. Connection of bare stranded wires may result in burning.

· Wire correctly and double-check all the wiring or the setting switches before turning ON the power supply. Incorrect wiring may result in burning Mount the Unit only after checking the connectors and terminal blocks completely.

. Be sure that the terminal blocks, connectors, Option Boards, and other items with locking devices are properly locked into place. Improper locking may result in malfunction

. Check the user program for proper execution before actually running it on the Unit. Not checking the program may result in an unexpected operation. • Check that the DIP switches and data memory (DM) are properly set before starting

operation. · Confirm that no adverse effect will occur in the system before attempting any of the following. Not doing so may result in an unexpected operation.

- . Changing the operating mode of the PLC (including the setting of the startup operating mode).
- · Force-setting/force-resetting any bit in memory.

. Changing the present value of any word or any set value in memory. · Resume operation only after transferring to the new CPU Unit the required data for the DM Area, Holding Area, and other memory areas. Not doing so may result in an unexpected operation

. Do not pull on the cables or bend the cables beyond their natural limit. Doing either of these may break the cables.

. Do not place objects on top of the cables. Doing so may break the cables. When replacing parts, be sure to confirm that the rating of a new part is correct.

Not doing so may result in malfunction or burning. . Before touching the Unit, be sure to first touch a grounded metallic object in order to discharge any static built-up. Not doing so may result in malfunction or damage.

. Do not touch the Expansion I/O Unit Connecting Cable while the power is being supplied in order to prevent malfunction due to static electricity. Do not turn OFF the power supply to the Unit while data is being transferred.

. When transporting or storing the product, cover the PCBs and the Units or put there in the antistatic bag with electrically conductive materials to prevent LSIs and ICs from being damaged by static electricity, and also keep the product within the

specified storage temperature range. • Do not touch the mounted parts or the rear surface of PCBs because PCBs have sharp edges such as electrical leads.

· Double-check the pin numbers when assembling and wiring the connectors.

 Wire correctly according to specified procedures. . Do not connect pin 6 (+5V) on the RS-232C Option board (CP1W-CIF01) to any

external device other than NV3W-MG20L/MR20L(-V1) Programmable terminal. The external device and the CPU Unit may be damaged. · Use the dedicated connecting cables specified in operation manuals to connect the

Units. Using commercially available RS-232C computer cables may cause failures in external devices or the CPU Unit.

· Check that parameters are properly set before starting operation. Not doing so may result in unexpected operation. Even if the tables and parameters are properly set. confirm that no adverse effects will occur in the system before running.

. Transfer a routing table to the CPU Unit only after confirming that no adverse effects will be caused by restarting CPU Bus Units, which is automatically done to make the new tables effective.

 The user program and parameter area data in the CPUI Unit is backed up in the Built-in Flash Memory. The BKUP indicator will light on the front of the CPU Unit when the backup operation is in progress. Do not turn OFF the power supply to the CPU Unit when the BKUP indicator is lit. If the power is turned OFF during a backup, the data will not be backed up and will not be transferred to the DM Area in RAM the next time the power supply is turned ON.

. Do not install battery and left PLC power OFF for a long time, Otherwise the battery life may be shortened.

 Install a battery (sold separately), If you are using clock data for the program. If the battery is not installed, the clock data will be initialized when the power is turned off, and the program may cause malfunction.

 When using a battery, set it to "Detect Low Battery" in PLC settings. If the setting is not changed, a program that uses clock data may cause malfunction, when the battery is exhausted

. When replacing the battery for a Unit, be sure to follow the procedure described in the instruction sheet.

 Before replacing the battery, supply power to the CPU Unit for at least 30 minutes and then complete battery replacement within 5 minutes. Memory data may be corrupted if this precaution is not observed.

Always use the following size wire when connecting CPU Units, I/O Units and Special I/O Units: AWG22 to AWG18 (0.32 to 0.82 mm²)

(NL)

23

廢雷池請回收

· Dispose of the product and batteries according to local ordinances as they apply Have qualified specialists properly dispose

of used batteries as industrial waste. . The following precaution must be displayed on all products that contain a lithium primary battery (containing at least 6 ppb of perchlorate) and that will be exported to or transported through the State of California in the USA. Perchlorate Material - special handling may apply. See

http://www.dtsc.ca.gov/hazardouswaste/perchlorate

A CP2W-BAT02 lithium primary battery (containing at least 6 ppb of perchlorate) can be mounted in a CP2E-N/S D -D CPU Unit. Display the precaution given above on your product's packaging box or shipping box if the product contains a CP2W-BAT02 Battery and is exported to or through the State of California in the USA. . This product is EMC compliant when assembled in a complete PLC system of the

specified PLC Series. For earthing, selection of cable for EMC compliance, refer to the manual for installation. . This is a class A product. In residential areas it may cause radio interference, in which

case the user may be required to take adequate measures to reduce interference. · Never short-circuit the positive and negative terminals of a battery or charge, disassemble, heat or incinerate the battery. Do not subject the battery to strong shocks or deform the battery by applying pressure. Doing any of these may result in leakage, rupture, heat generation, or ignition of the battery. Dispose of any battery that has been dropped on the floor or otherwise subjected to excessive shock. Batteries that have been subjected to shock may leak if they are used.

 UL standards require that only an experienced engineer can replace the battery. Make sure that an experienced engineer is in charge of battery replacement. Follow the procedure for battery replacement given in this manual.

- . Do not allow foreign matter such as wiring debris to enter the unit. Not doing so may result in malfunction or burning.
- Do not drop or give any abnormal vibration or shock to this unit. It may cause a malfunction or fire.

Optional Products

Be sure to install the following optional products in the PLC before use.

Optional product	Applicable PLC			
	CP2 E- E/SDDD-D		CP2E-NDDD	-
	E1000	E/S3000	N1400	N3000
	E1400	E/S40□□	N2000	N40 🗆 🗆
	E2000	E/S6000		N60 🗆 🗆
RS-232C Option Board	Can not	Can not be	Can be used	Can be used
CP1W-CIF01	be used	used		
RS-422A/485 Option Board				
CP1W-CIF11/CIF12-V1				
Serial Communication Option Board			Can be used	Can be used
CP2W-CIFD1/CIFD2/CIFD3				
Analog Option Board			Can be used	Can be used
CP1W-MAB221/ADB21/DAB21V				
Data Access Module CP1W-DAM01			Can not be used	Can not be used
Ethernet Option Board CP1W-CIF41			Can not be used	Can not be used
Memory Cassette CP1W-ME05M			Can not be used	Can not be used
I/O Connection Cable CP1W-CN811		Can be used	Can not be used	Can be used

Reference Manuals

Please be sure to read the related user manuals in order to use the PLC safely and properly. Be sure you are using the most current version of the manual.

Name	Cat No.
SYSMAC CP Series CP2E CPU Unit Hardware User's Manual	W613
SYSMAC CP Series CP2E CPU Unit Software User's Manual	W614
SYSMAC CP Series CP1E/CP2E CPU Unit Instructions Reference Manual	W483
CS/CJ/CP/NSJ Series Communications Commands Reference Manual	W342

or regulations which apply to the combination of the Product in the Buyer's application

or use of the Product. At Buyer's request, Omron will provide applicable third party

Product. This information by itself is not sufficient for a complete determination of the

other application or use. Buyer shall be solely responsible for determining appropriate

ness of the particular Product with respect to Buyer's application, product or system.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK

TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE

HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRO-

DUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WIT-

OMRON Corporation Industrial Automation Company

Contact: www.ia.omron.com

Wegalaan 67-69,2132 JD Hoofddorp 2895 Greenspoint Parkway, Suite 200

OMRON ASIA PACIFIC PTE. LTD. OMRON (CHINA) CO., LTD.

(Lobby 2), Alexandra Technopark. 200 Yin Cheng Zhong Road.

Note: Specifications subject to change without notice

No. 438A Alexandra Road #05-05/08 Room 2211, Bank of China Tower,

OMBON ELECTRONICS LLC

Pu Dong New Area, Shanghai

Tel: (86) 21-5037-2222

Fax: (86) 21-5037-2200

Tel: (1) 847-843-7900

Fax: (1) 847-843-7787

200120. China

Hoffman Estates, IL 60169 U.S.A.

certification documents identifying ratings and limitations of use which apply to the

suitability of the Product in combination with the end product, machine, system, or

Suitability for Use Omron Companies shall not be responsible for conformity with any standards, codes

Buyer shall take application responsibility in all cases.

HIN THE OVERALL EQUIPMENT OR SYSTEM

OMRON

Kyoto, JAPAN

Regional Headquarters

OMRON FUROPE B V

Tel: (31)2356-81-300

Fax: (31)2356-81-388

Singapore 119967

Tel: (65) 6835-3011

Fax: (65) 6835-2711

Printed in China

The Netherlands