

K3CV-F-1

Mounting bracket


OMRON

EN INSTRUCTION SHEET

5835712-4A


■ Mounting

Step 1: Utilize the two screw holes to securely mount the bracket to the wall.

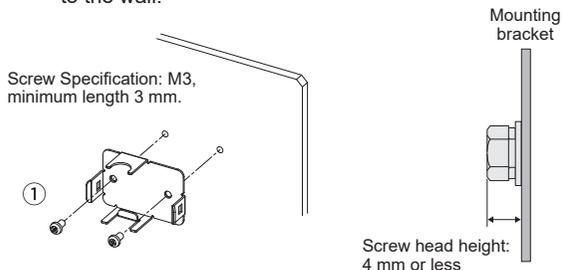


- Select screws appropriate for the material of the wall being used for mounting.
- To avoid interference between the mounting bracket and the K3CV, ensure that the screw heads, including washers, do not exceed 4mm in height.
- The specified torque for tightening the screws is 0.53 to 0.73 N·m.


Step2: Pass the cable tie through the mounting bracket. (Prepare a cable tie of 150 mm or longer.)

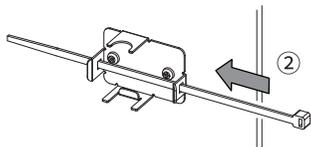


Step3: Connect the cables for the analog sensor side and the IO-Link communication side to the K3CV.

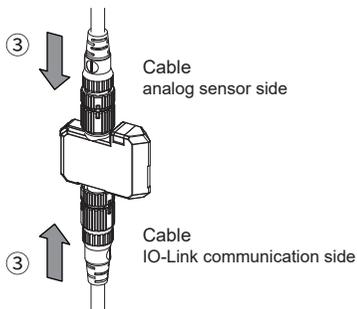


Step4: With the K3CV label facing outward, push it fully into the mounting bracket. The installation direction is fixed.

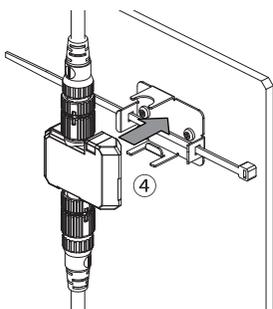


<Example of installation on the reverse side>

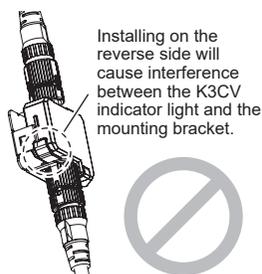


Step5: Secure the K3CV firmly with a cable tie.

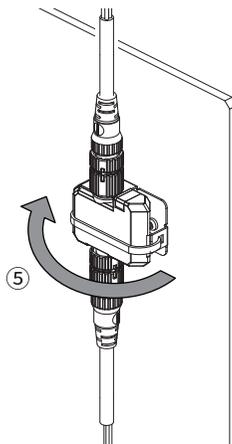

Step6: To prevent stress on the connectors, secure the cables firmly with cable ties or similar fasteners.

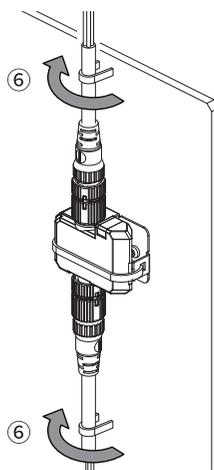

■ Exterior View (Unit: mm)

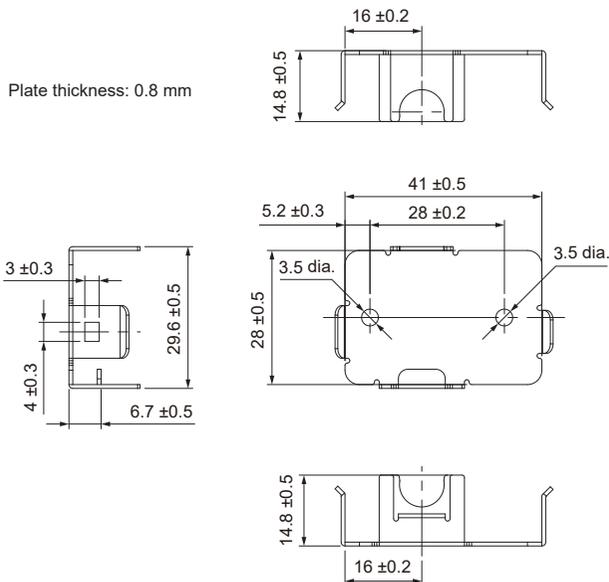

形K3CV-F-1

取付金具

JPN

取扱説明書


5835712-4A

OMRON

Step5: 結束バンドで本体をしっかり固定してください。


■取り付け

Step1: 2か所のねじ穴を使い取付金具を壁に取り付けてください。

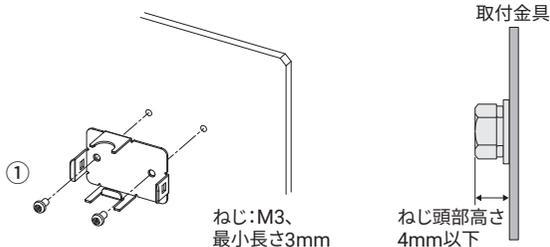


- ・ねじは、取り付ける壁の材質にあわせて、お客様でご準備ください。
- ・取付金具とK3CV本体とが干渉しないように、ワッシャー含めねじ頭部高さは4mm以下としてください。
- ・ねじ締め既定トルクは“0.53~0.73N・m”です。


Step2: 取付金具に結束バンドを通してください。
(結束バンド(150mm以上)をお客様でご準備ください。)

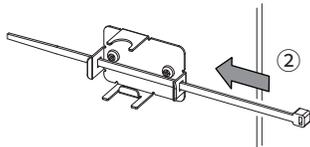



Step3: ケーブル(アナログセンサ側とIO-Link通信側)を両側に取り付けてください。

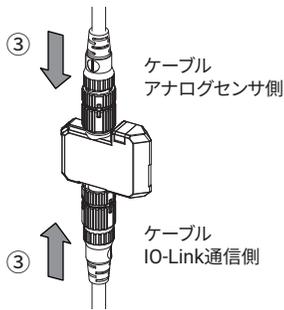


Step4: K3CV本体のラベルを表側に向けて、取付金具に最後まで押し込んでください。
取付金具には取り付け方向があります。

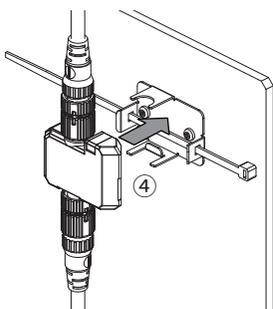

<反対に取り付けた例>

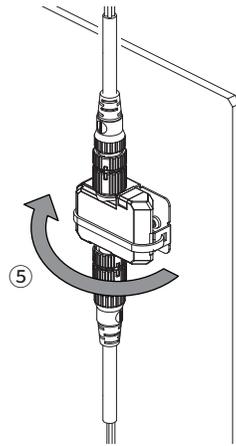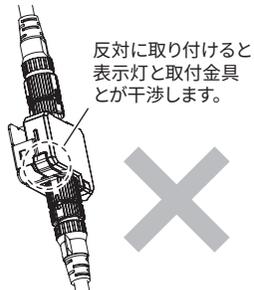

Step6: ケーブルは結束バンド等で動かないように固定してください。

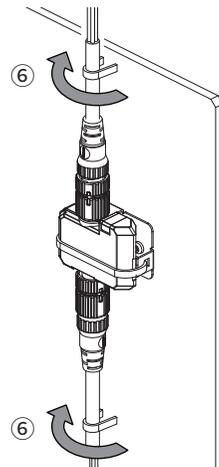

■外形図 (単位: mm)

